


# Sena 6mm Bifold Door Installation Instructions

THIS PRODUCT MUST BE INSTALLED  
BY A LICENSED PLUMBER / JOINER

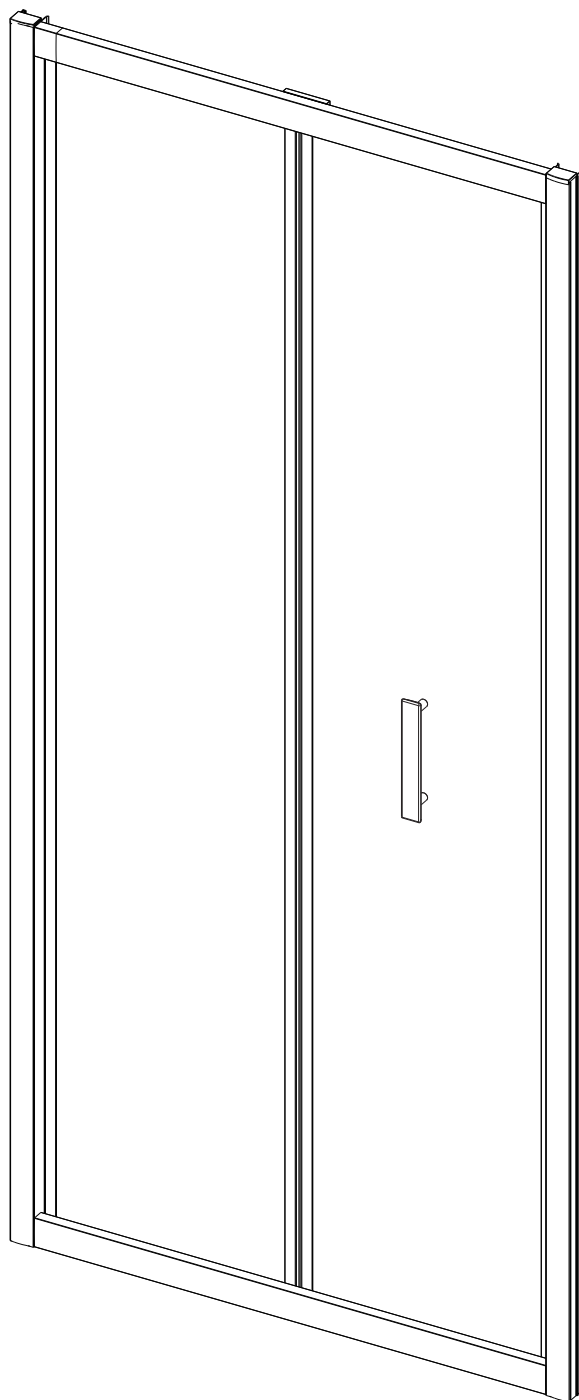

Manufactured to: BS EN14428



# Shower Enclosure Cleaning Instructions

To maintain your shower enclosure we advise cleaning your enclosure after every use following the instructions below:

*Install the shower enclosure in a well-ventilated bathroom and ensure any residual water on the shower glass is removed after every use.*

## MYSHIELD Easy Clean Glass Cleaning

Clean with warm soapy water (Alternatively you can use a white vinegar and water solution of equal parts, ensure all vinegar residue is washed off) and a damp cloth/soft sponge then rinse and remove any excess water using a squeegee. To give a nice sheen buff with a dry cloth.


## Profiles & Fixings Cleaning

Regularly clean with warm soapy water and a damp cloth/soft sponge only. After cleaning rinse with clean water to remove any residue left behind.

**DO NOT use scouring pads or abrasive chemicals cleaners - these can cause damage to the components, especially the plated parts. Do not allow limescale to build up in hard water areas on the shower enclosure.**

The metal parts of the shower enclosure are vulnerable to acid attack and some strong household cleaners including strong disinfectants, denture cleaners and hair dyes, may contain acid. These products can have a varying effect on the surface from black spots/streaks (which cannot be removed) to pitting the surface. Contact with these materials should be avoided.




After installation, please leave the instructions with the end user.

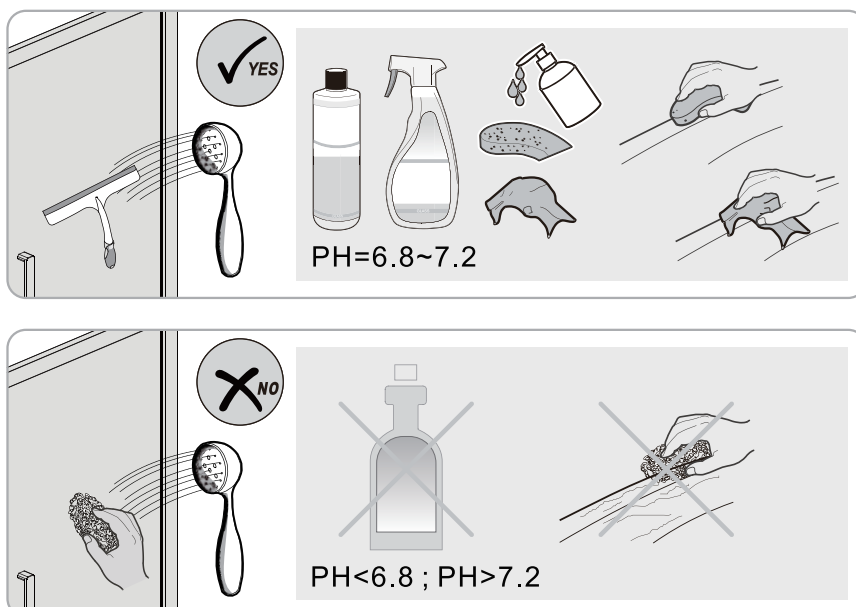

## General Information

Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. **TAKE CARE WHEN HANDLING GLASS PARTS-AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE.** Glass breakage claims will not be accepted after the product has been unpacked.


## TOOLS REQUIRED

| DESCRIPTION    | PART IMAGE                                                                         | DESCRIPTION            | PART IMAGE                                                                              |
|----------------|------------------------------------------------------------------------------------|------------------------|-----------------------------------------------------------------------------------------|
| Tape measure   |   | Drill                  |      |
| Spirit level   |   | Flat-head Screwdriver  |      |
| Pencil         |   | Cross head Screwdriver |  PZ1 |
| Ø6mm Drill bit |   | Mallet                 |      |
| Ø3mm Drill bit |  | Silicone Sealant       |     |



This product is heavy and may require two people to install.

# ASSEMBLY INSTRUCTIONS-DRAWING

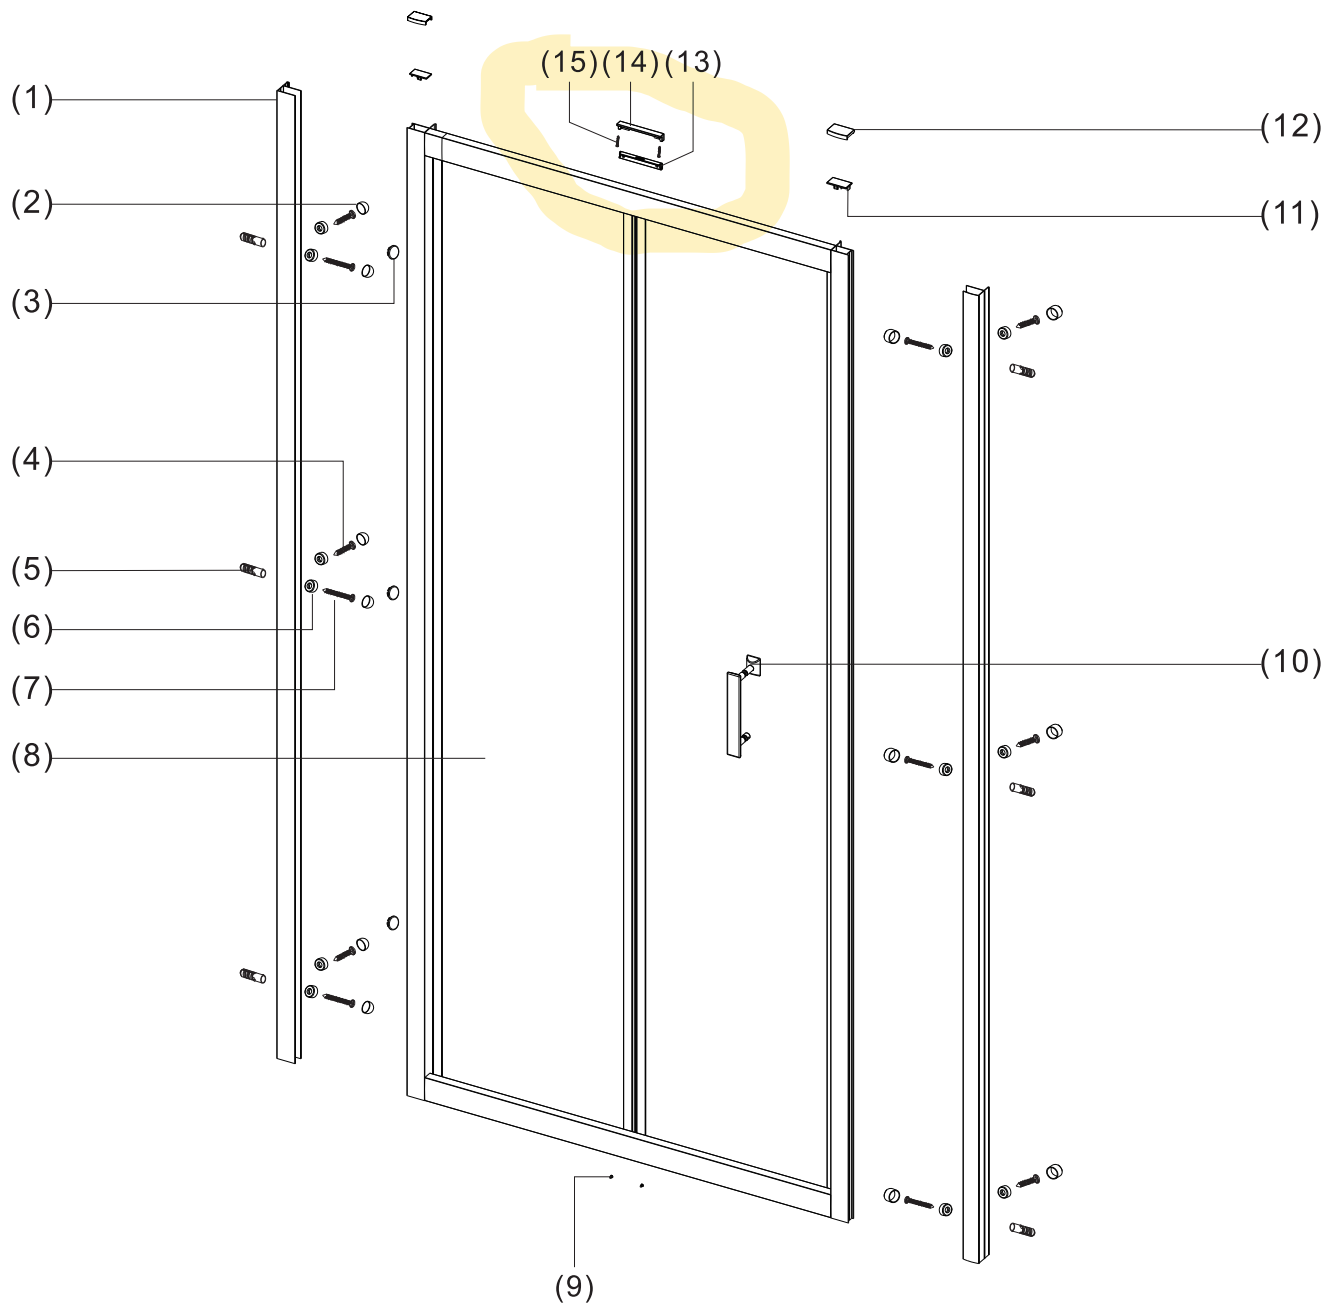

- (1) 2x Wall Profiles
- (2) 12x Screw Cover Caps
- (3) 3x Screw Caps
- (4) 6x Screws 4x16
- (5) 6x Wall Plugs
- (6) 12x Screw Cover Clips
- (7) 6x Screws 4x30
- (8) 1x Bifold Door


- (9) 2x Button caps
- (10) 1x Handle
- (11) 2x Upright profile cover caps
- (12) 2x Wall Profile caps L/R
- (13) 1x Door Clip A
- (14) 1x Door Clip B
- (15) 2x Screws ST3.5x12

## Before Installation


Please ensure that the shower tray is level and checked with a spirit level. The tray should be installed first. Tiles should then be tiled down to the tray. The enclosure can then be installed.

Step 1 Mark wall fixing positions. Drill wall and screw to wall



Note: Make sure the wall profile vertical or lean out a little bit to the outside, it will make sure the doors close well !

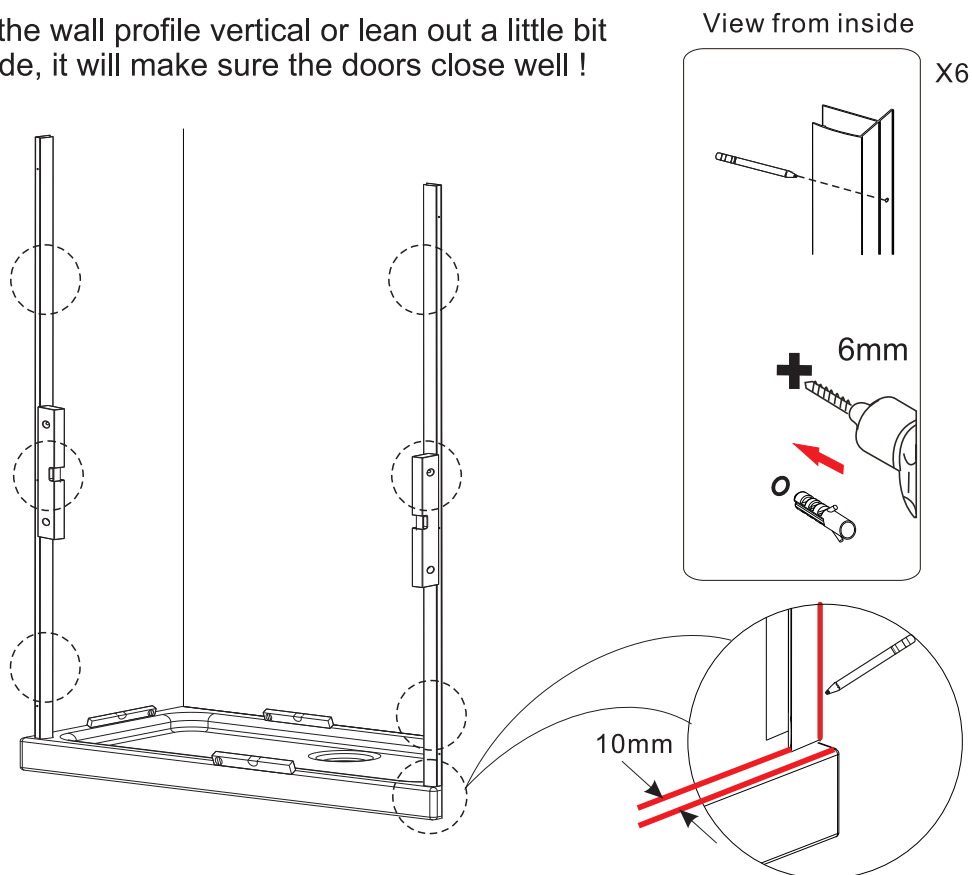



Step 2 Slide other wall profile onto door , lift door onto tray

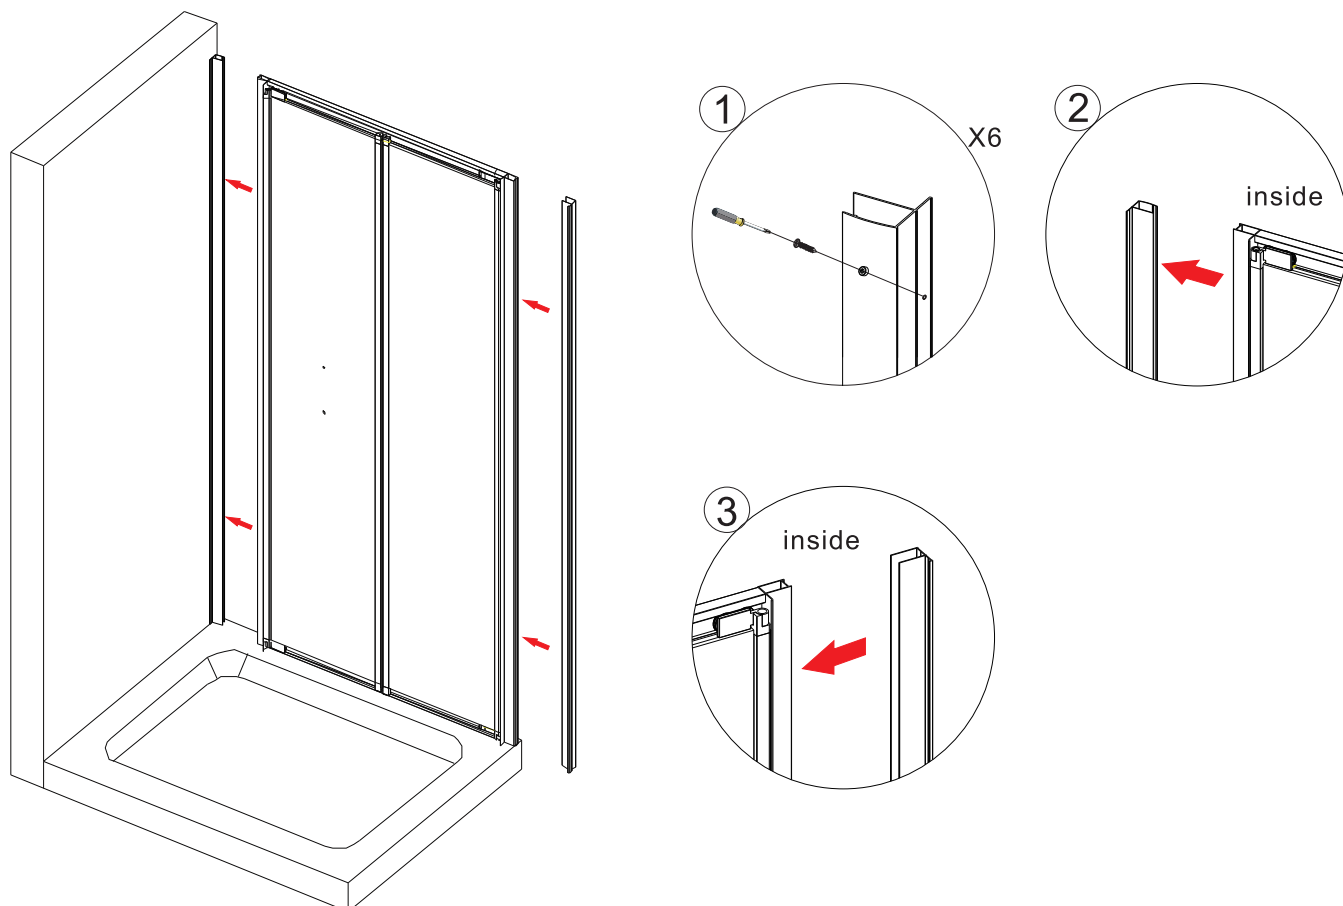


### Step 3 Fitting wall profile of fixed panel side

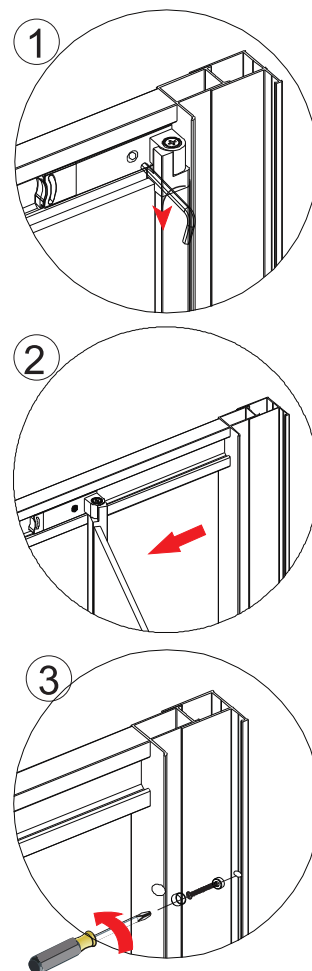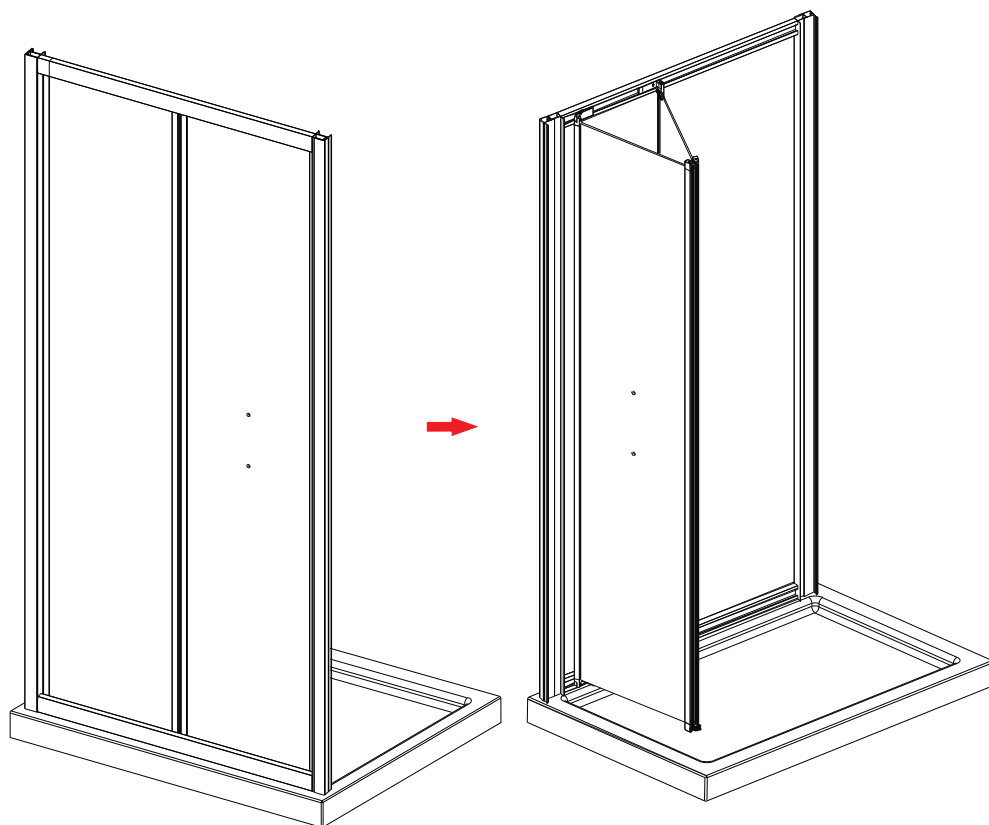


### Step 4 Fitting the fixed panel

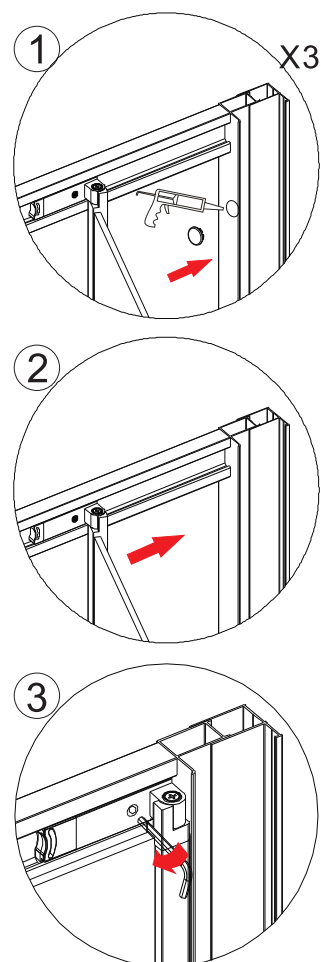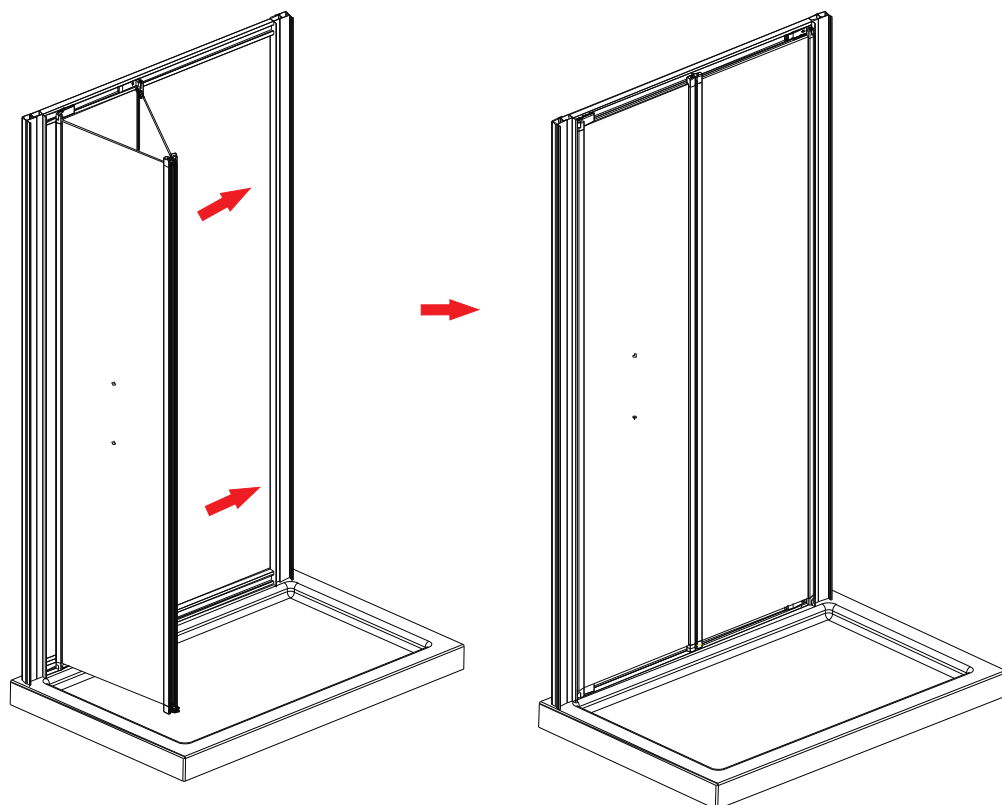


## Step 5 Drill the door frame to the wall profiles and fit the handle

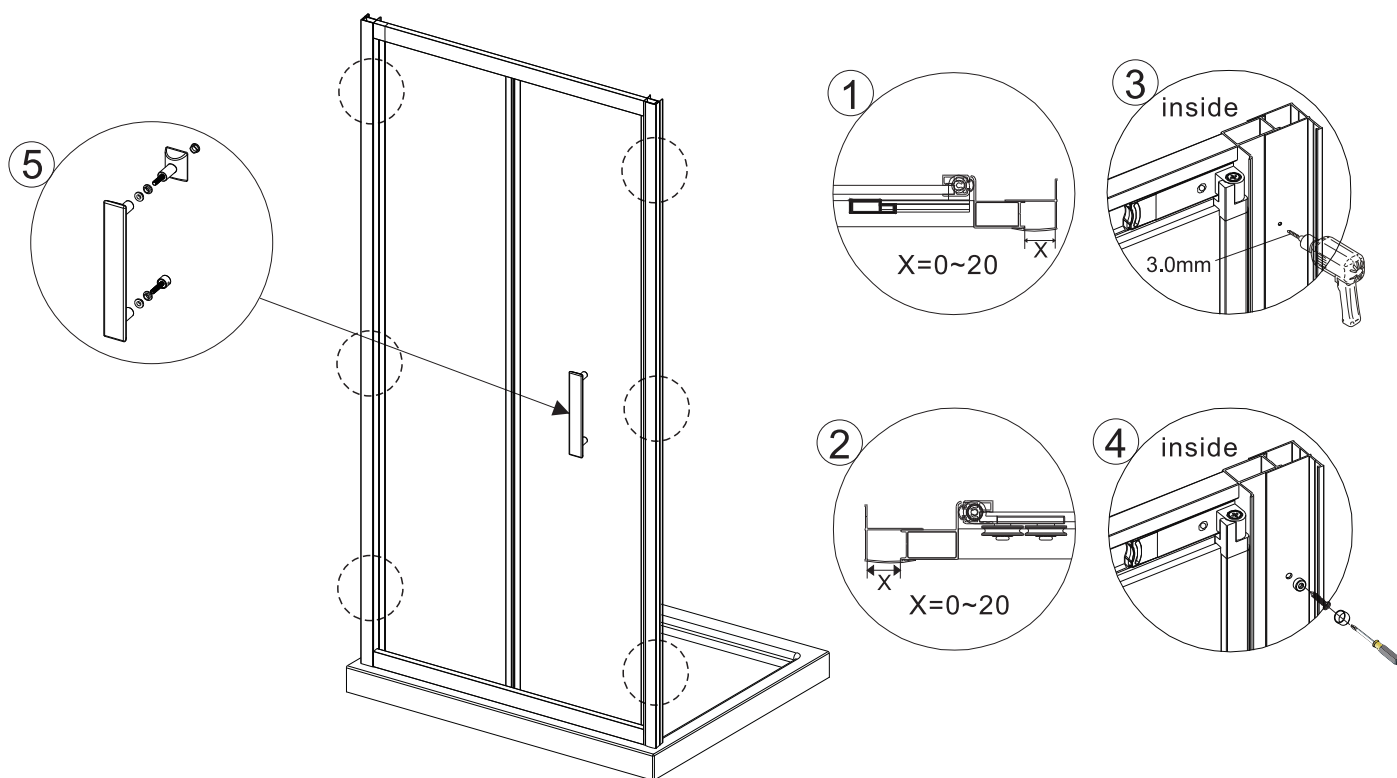

## Step 6 Install door clip and button caps

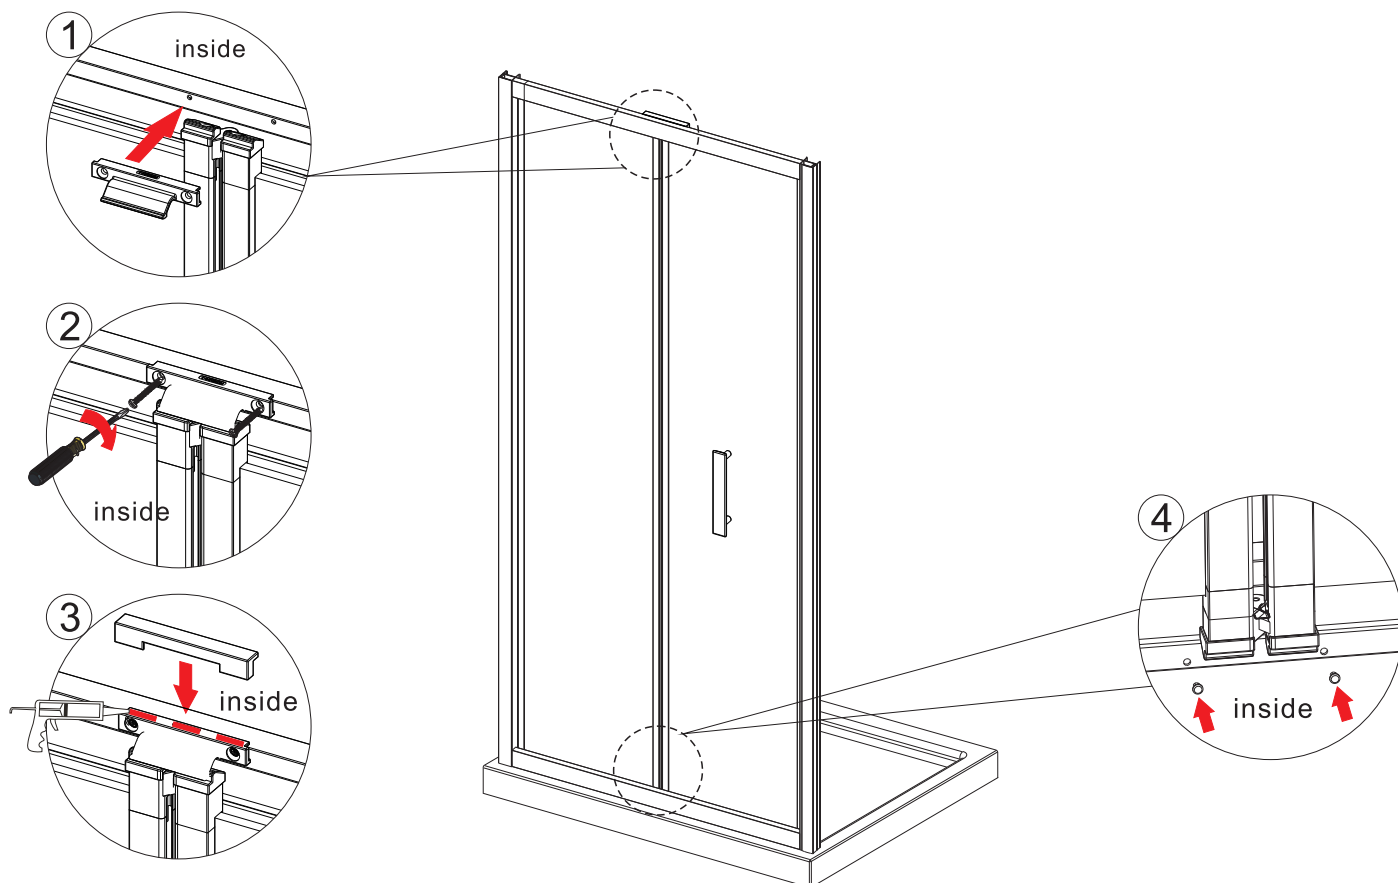

## Step 7 Fix cover caps

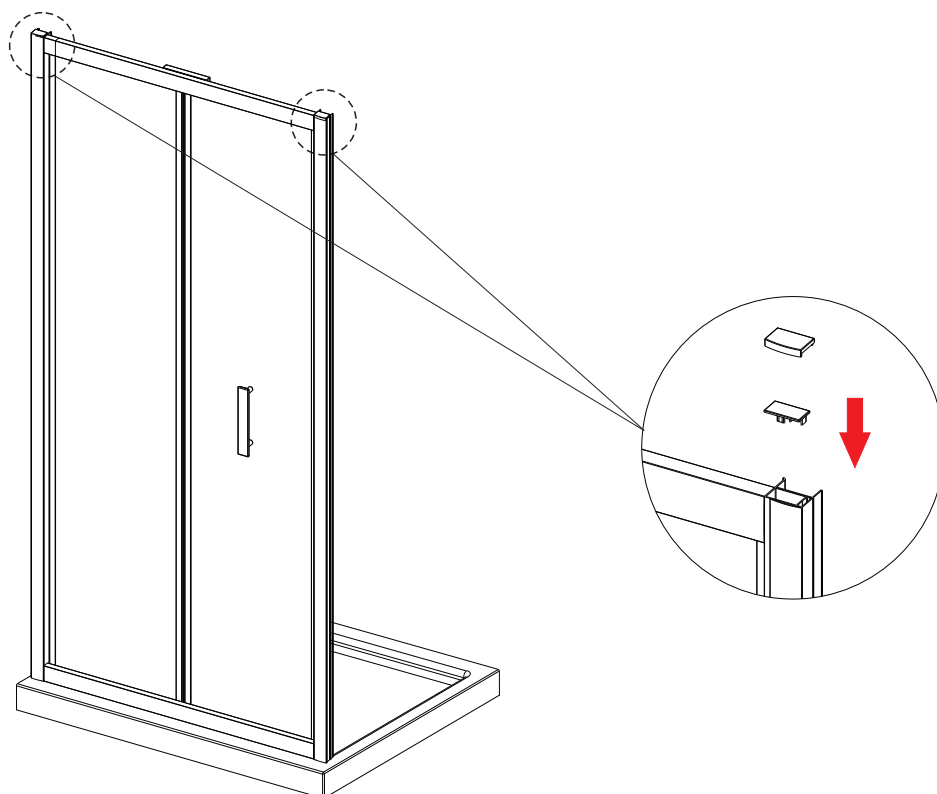

## Step 8 Silicone the outside edges

