


Sena 6mm Sliding Door Installation Instructions

THIS PRODUCT MUST BE INSTALLED
BY A LICENSED PLUMBER / JOINER

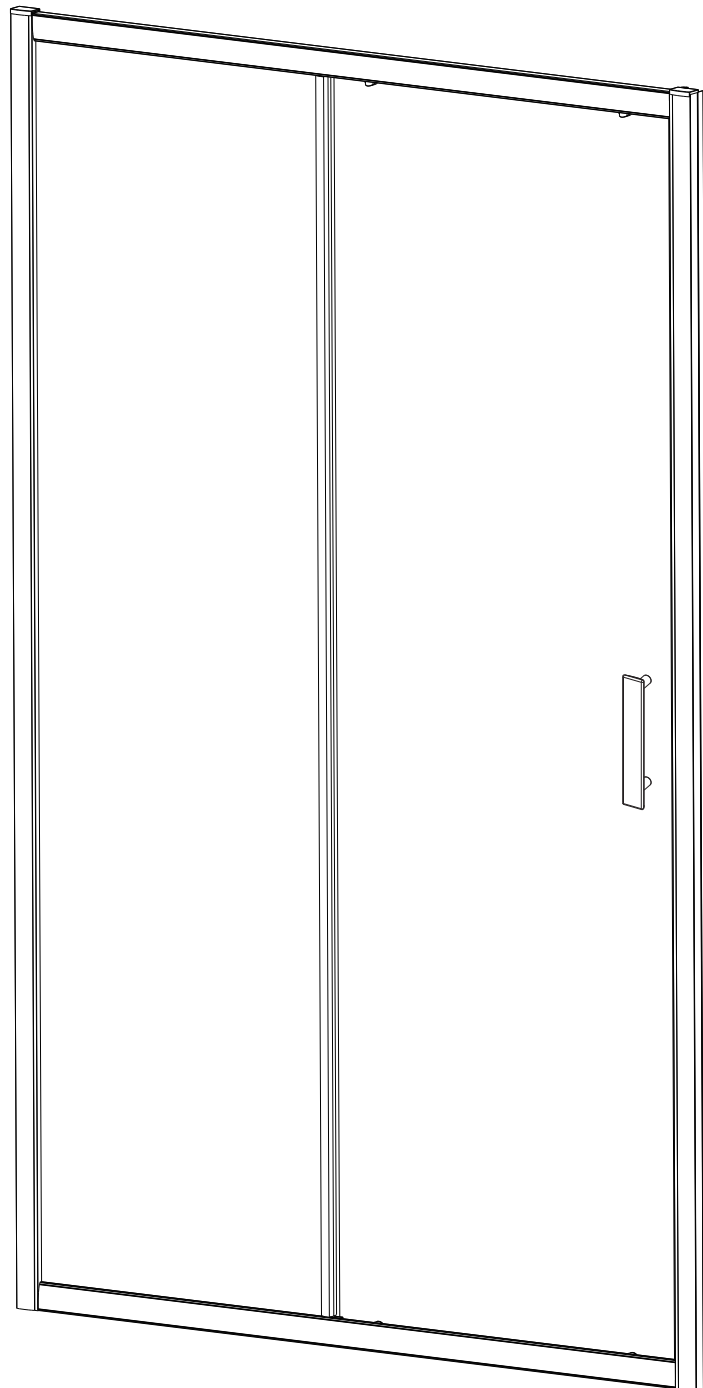

Manufactured to: BS EN14428



Shower Enclosure Cleaning Instructions

To maintain your shower enclosure we advise cleaning your enclosure after every use following the instructions below:

Install the shower enclosure in a well-ventilated bathroom and ensure any residual water on the shower glass is removed after every use.

MYSHIELD Easy Clean Glass Cleaning

Clean with warm soapy water (Alternatively you can use a white vinegar and water solution of equal parts, ensure all vinegar residue is washed off) and a damp cloth/soft sponge then rinse and remove any excess water using a squeegee. To give a nice sheen buff with a dry cloth.


Profiles & Fixings Cleaning

Regularly clean with warm soapy water and a damp cloth/soft sponge only. After cleaning rinse with clean water to remove any residue left behind.

DO NOT use scouring pads or abrasive chemicals cleaners - these can cause damage to the components, especially the plated parts. Do not allow limescale to build up in hard water areas on the shower enclosure.

The metal parts of the shower enclosure are vulnerable to acid attack and some strong household cleaners including strong disinfectants, denture cleaners and hair dyes, may contain acid. These products can have a varying effect on the surface from black spots/streaks (which cannot be removed) to pitting the surface. Contact with these materials should be avoided.





After installation, please leave the instructions with the end user.

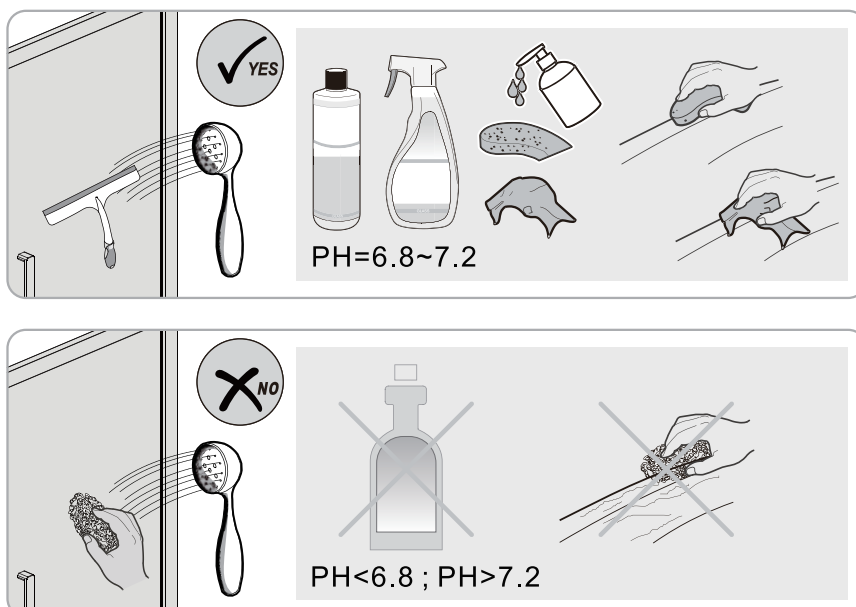

General Information

Please inspect this product upon delivery. Any missing parts or manufacturing defects must be reported immediately to the supplier. Damage or defects reported later will not be accepted. **TAKE CARE WHEN HANDLING GLASS PARTS-AVOID HEAVY CONTACT BETWEEN THE GLASS EDGES AND ANY HARD SURFACE.** Glass breakage claims will not be accepted after the product has been unpacked.


TOOLS REQUIRED

DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Flat-head Screwdriver	
Pencil		Cross head Screwdriver	 PZ1
Ø6mm Drill bit		Mallet	
Ø3mm Drill bit		Silicone Sealant	
Ø4mm Hexagon Wrench			



This product is heavy and may require two people to install.

ASSEMBLY INSTRUCTIONS - DRAWING

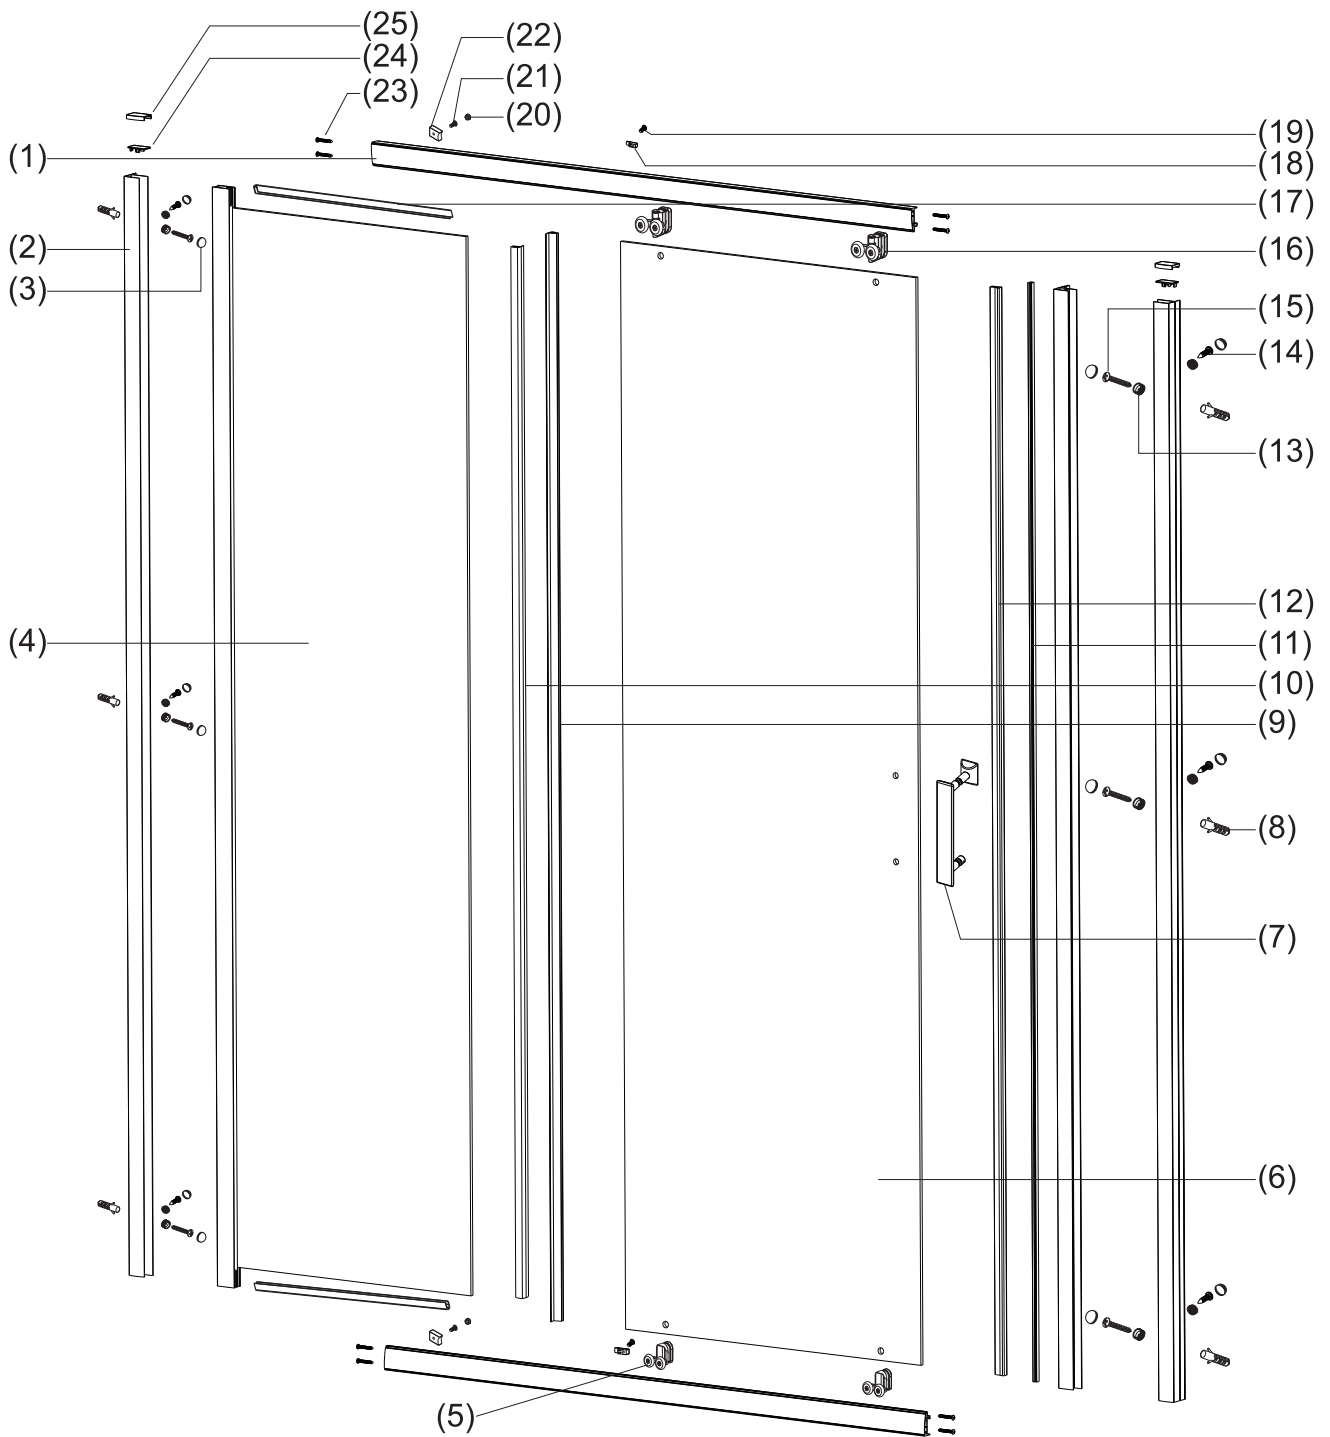


- (1) 2x Top And Bottom Rails
- (2) 2x Wall Profiles
- (3) 12x Screw Cover Caps
- (4) 1x Flat Fixed Panel
- (5) 2x Bottom Rollers
- (6) 1x Moving Panel
- (7) 1x Handle
- (8) 6x Wall plugs
- (9) 1x Upright Water Seal For Moving Panel
- (10) 1x Upright Water Seal For Fixed Panel
- (11) 1x Magnet Seal A
- (12) 1x Magnet Seal B
- (13) 12x Screw Cover Clips

- (14) 6x Screws ST4x16
- (15) 6x Screws ST4x30
- (16) 2x Top Rollers
- (17) 2x Bottom/Top Seals
- (18) 2x Glass Clips
- (19) 2x Screws ST4x13
- (20) 2x Cover Caps For Bumper Block
- (21) 2x Screws ST4x10
- (22) 2x Bumper Blocks
- (23) 8x Screws ST3.5x30
- (24) 2x Cover Caps For Upright Profile
- (25) 2x Cover Caps For wall Profile L/R


Before Installation

Please ensure that the shower tray is level and checked with a spirit level.
The tray should be installed first. Tiles should then be tiled down to the tray.
The enclosure can then be installed.


Step 1

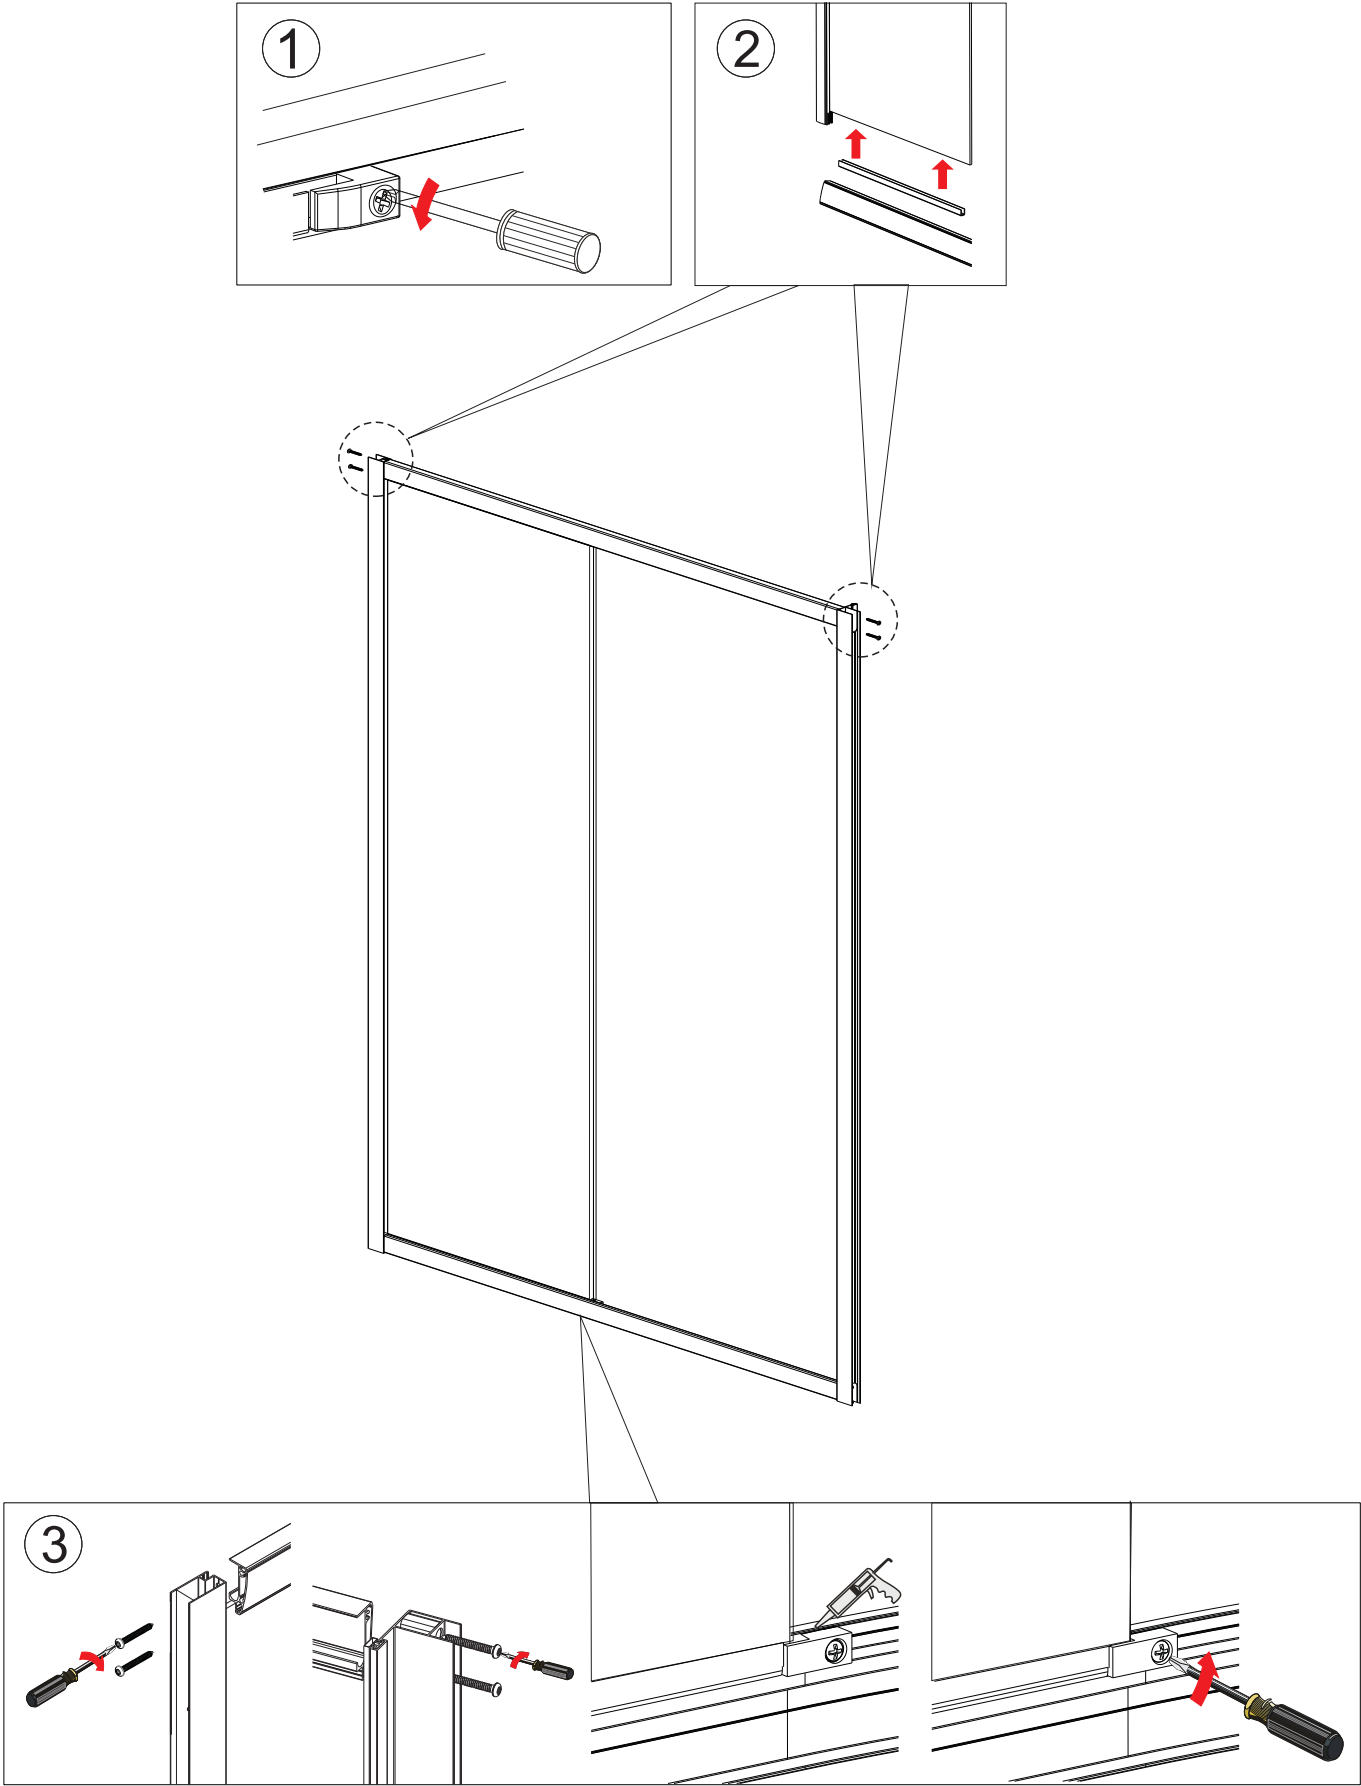



Step 2

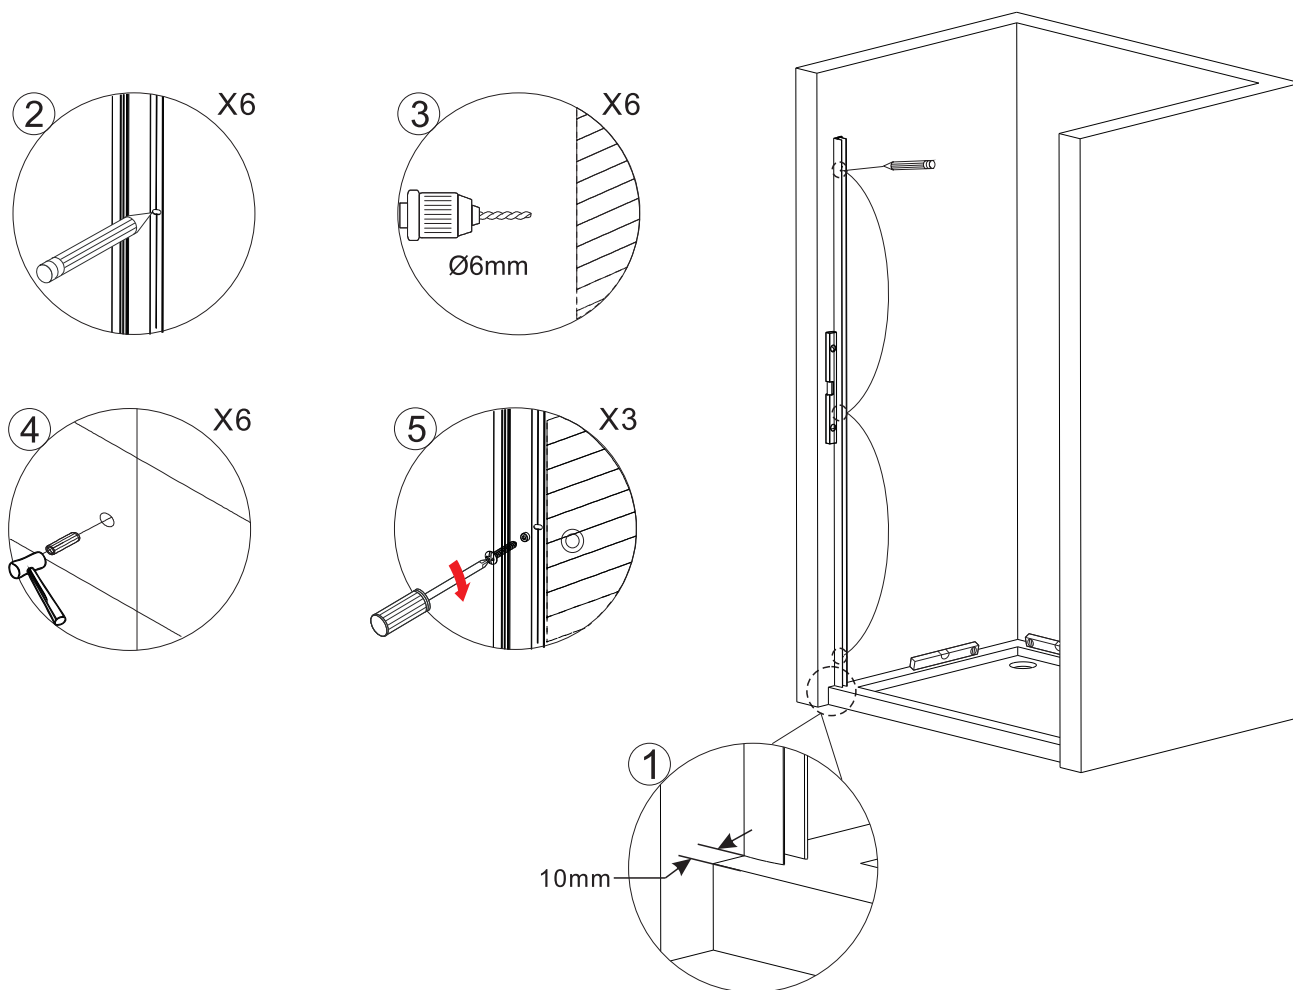





Step 3

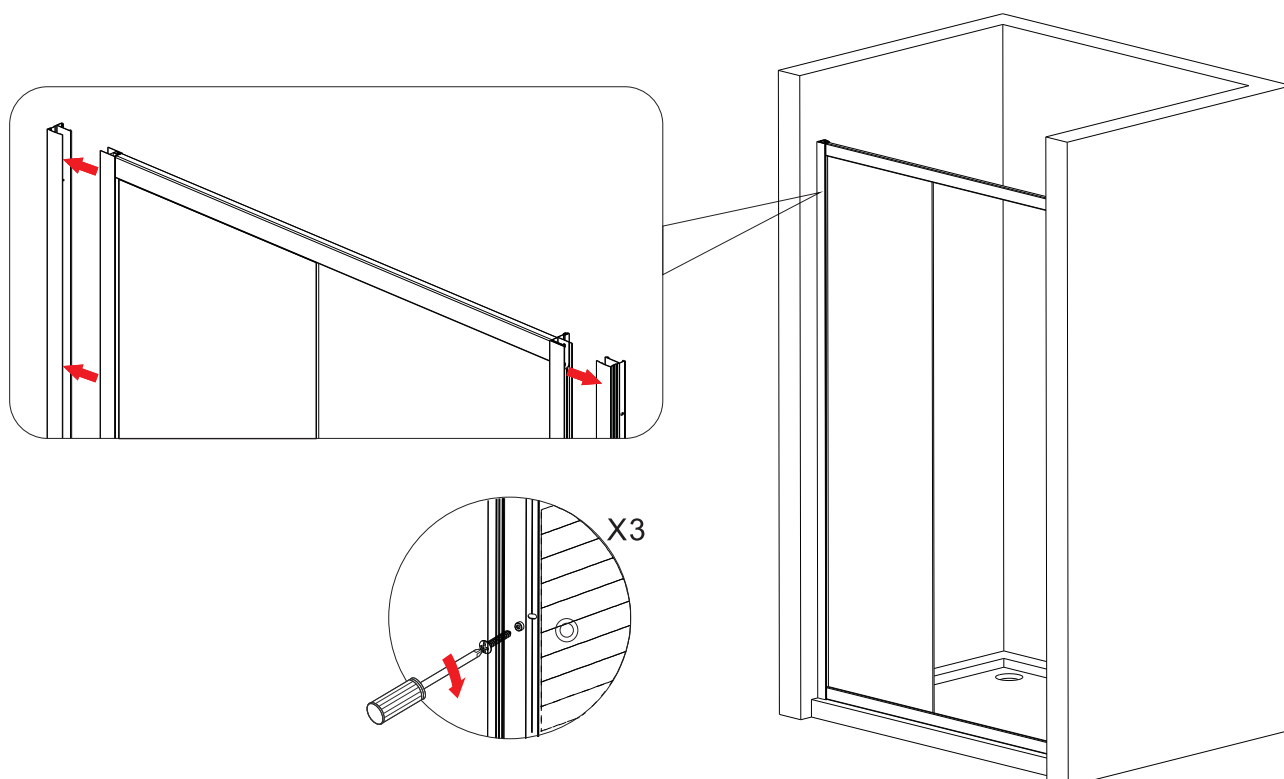


Step 4

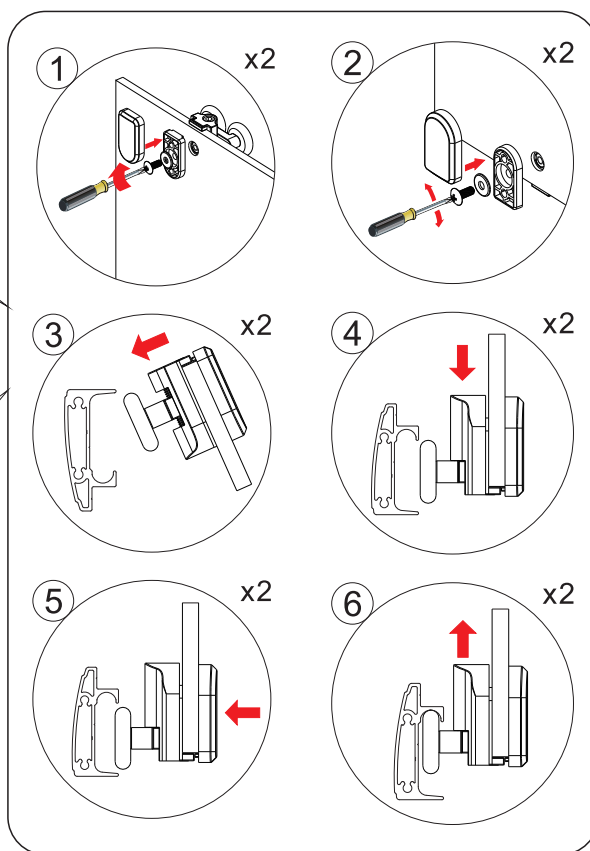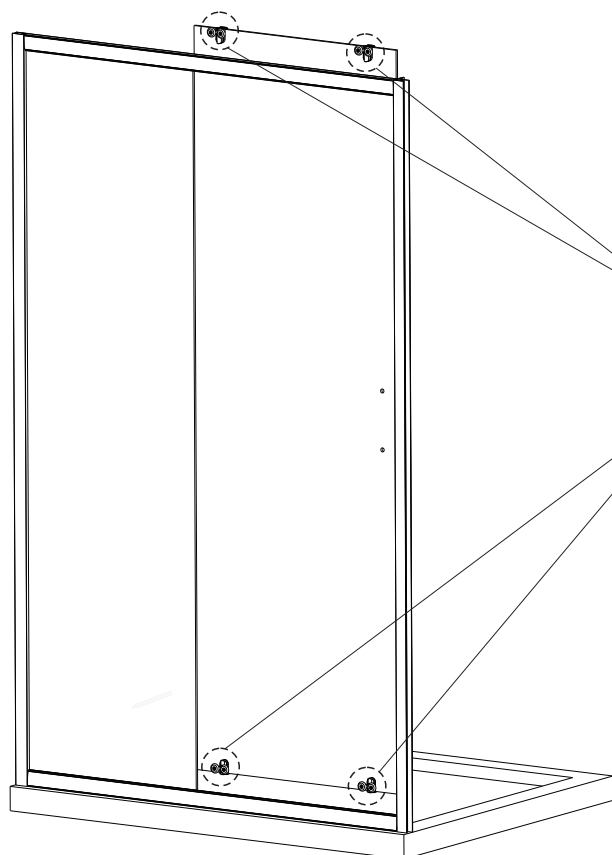


Step 5

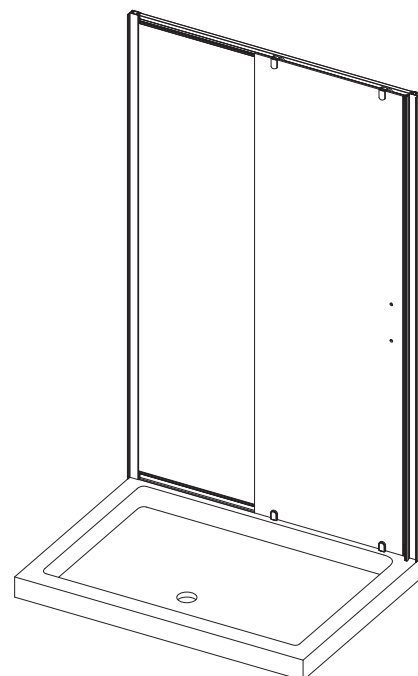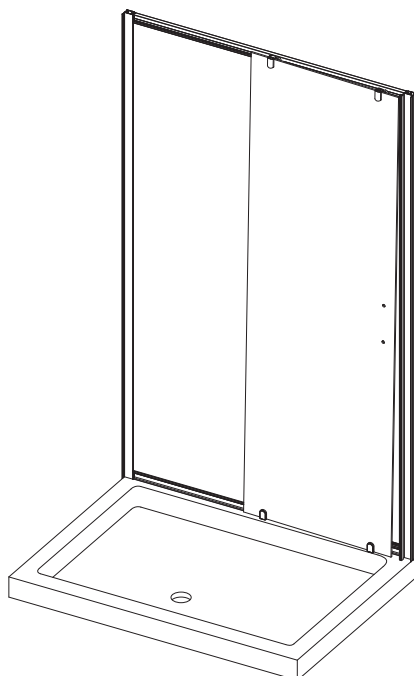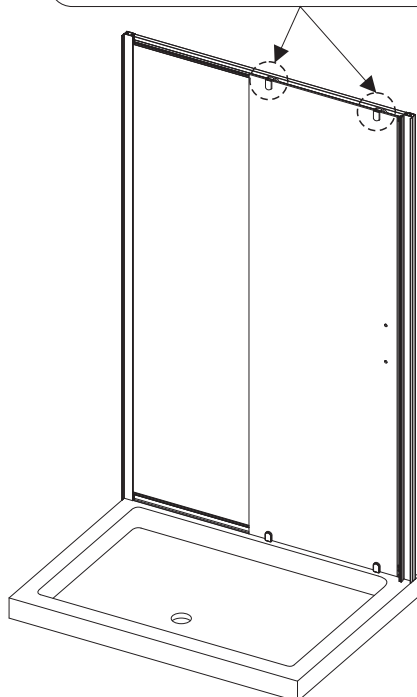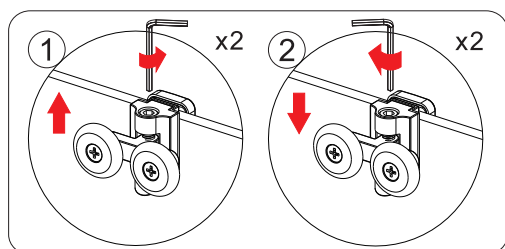


Step 6

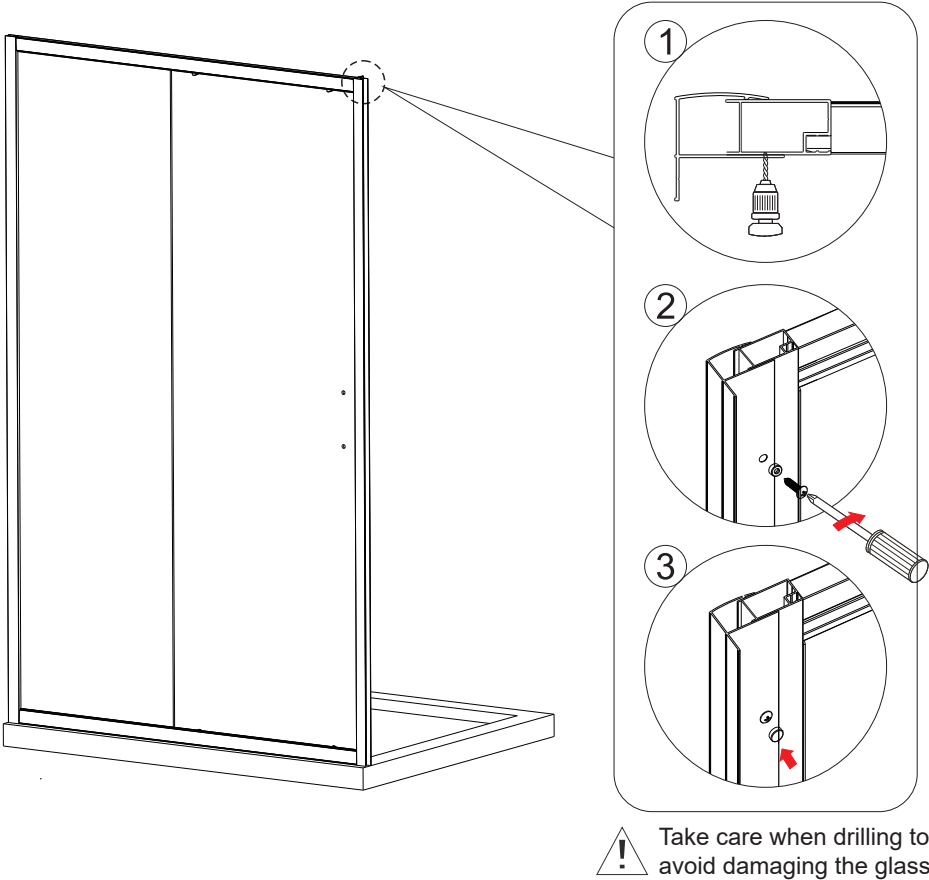


Step 7

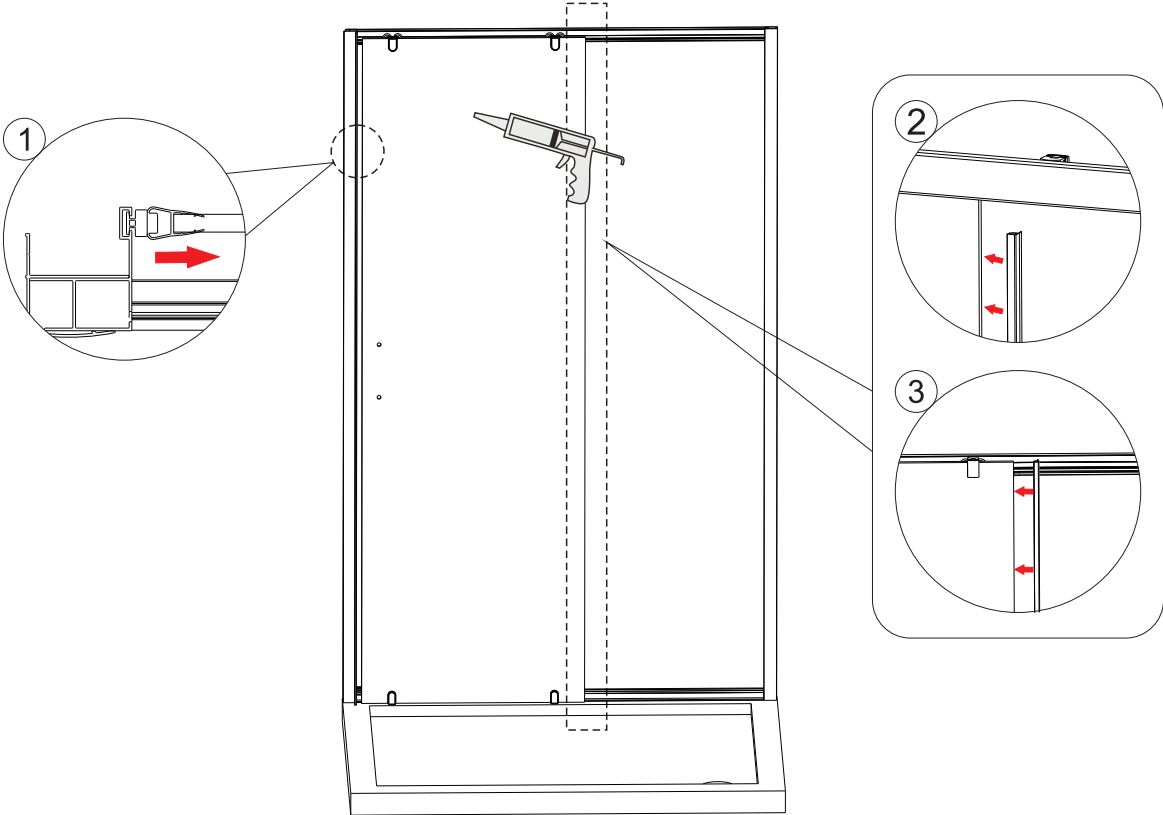

Step 8

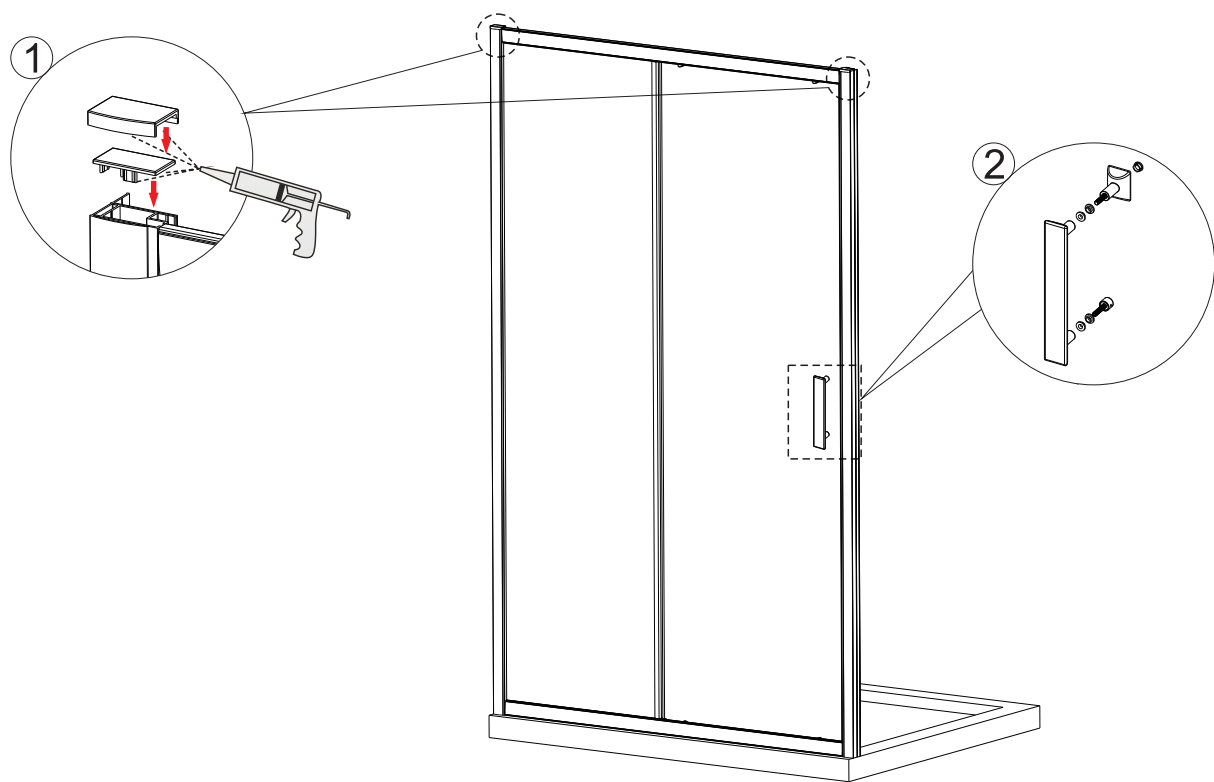

Step 9

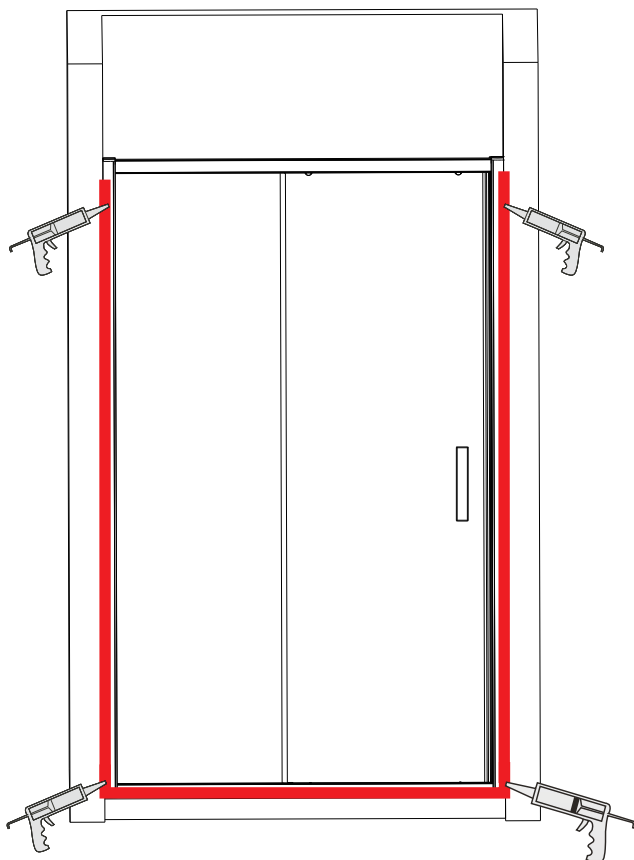

Allow 24 hours for silicone to dry before use. Silicone on the outside edge only