

Exin Shower Tray with Leg & Panel Kit Installation Manual



**THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER**

IMPORTANT - STORE TRAY ON FLAT

PRIOR TO INSTALLATION

Before installation, the shower tray and Leg & Panel Kit must be thoroughly inspected for any defects. In the unlikely event that a defect is found, do not install the products. Instead, return any defective products to the supplier, who will arrange a replacement if necessary.

Checks should include, but not limited to, the following:

- ☑ Ensure that the colour and finish of the shower tray is acceptable
- ☑ Ensure that the product is not cracked or chipped.
- ☑ Ensure that there is no twisting or distortions of the product.
- ☑ Ensure that the shower tray suitably drains water when levelled.
- ☑ Ensure that the shower tray is the correct size by checking lengths with a measuring tape.
- ☑ Waste Installation: A minimum of 300mm of straight pipe is required before any bends.

The manufacturer will not be held liable for the cost of removal, replacement, or any other expenses incurred due to a defective shower tray if the defect was identifiable prior to installation. It is the responsibility of the installer or end user to inspect the product thoroughly before fitting.

INSTALLATION OF THE SHOWER TRAY WILL BE TREATED AS ACCEPTANCE OF QUALITY.

CHECKING FOR TWISTS

Place the shower tray on a flat level surface.

Using a spirit level, ensure that all outer edges of the shower tray are flat and level as per figure 1.

If any of the levels cannot be corrected when embedding the shower tray, then it may be twisted or distorted. If this is the case, then the shower tray must not be installed and should be returned to the retailer for replacement.

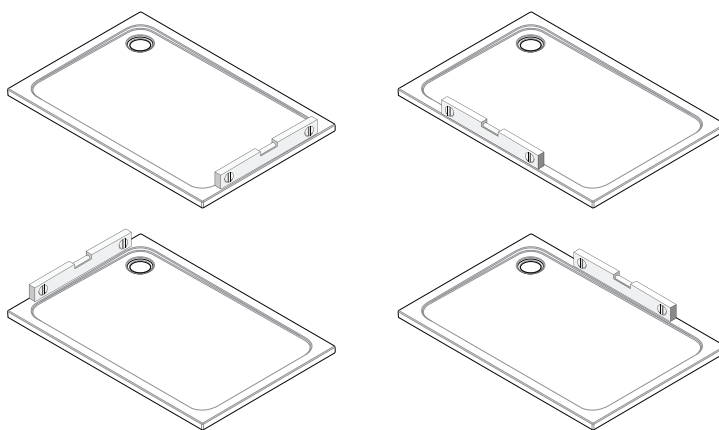


Figure 1

AFTER SALES & TECHNICAL SUPPORT

Our highly experienced after sales and technical support team are always on hand to help should you require technical advice or a spare part.

T: +44 (0)28 3025 9988


Exin Shower Tray with Leg & Panel Kit Installation Manual



**THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER**

INSTALLATION

Note that this shower tray is suitable for installation on both wooden and concrete floors. If fitting to a wooden floor, it is recommended that the base be made from marine ply as it resists delamination under humid conditions.






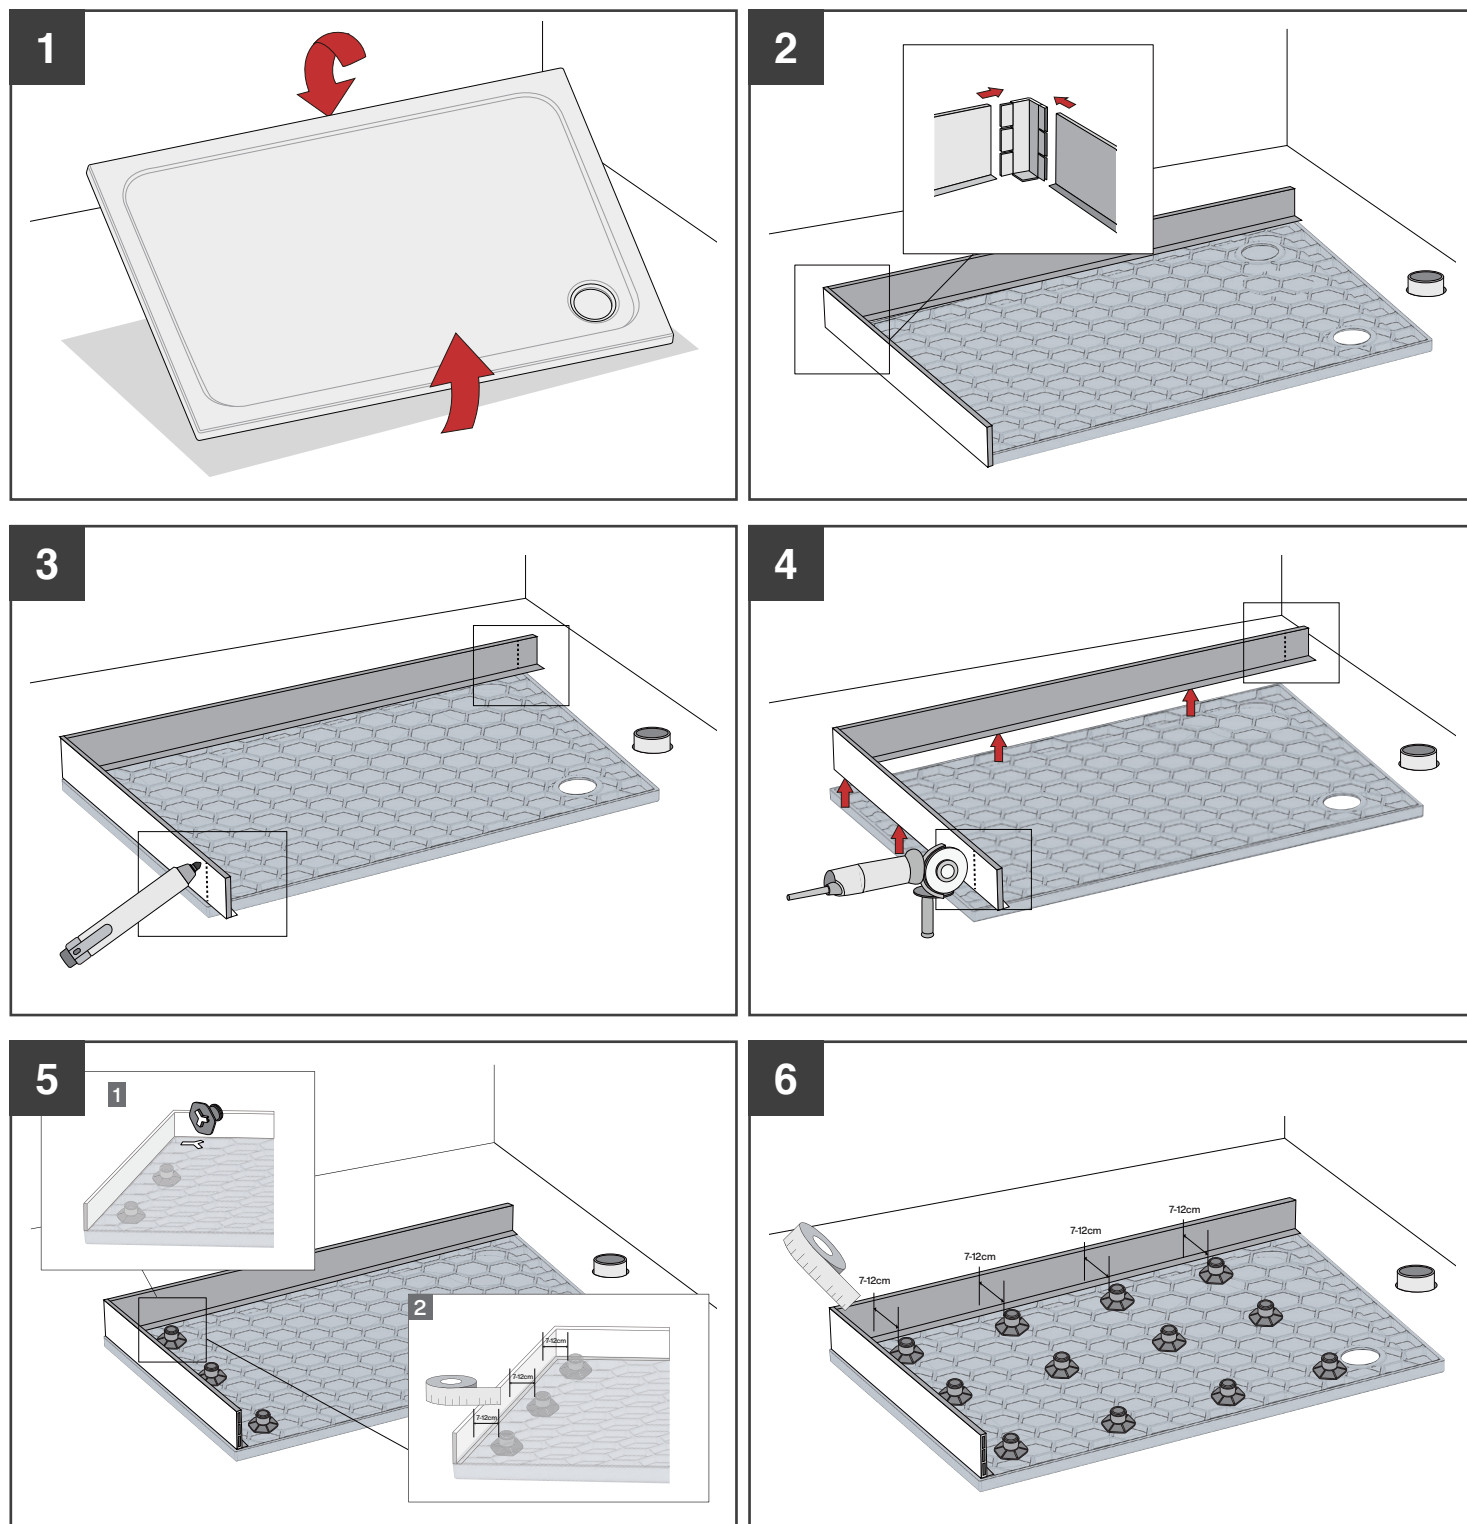


Exin Shower Tray with Leg & Panel Kit Installation Manual



THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER

INSTALLATION

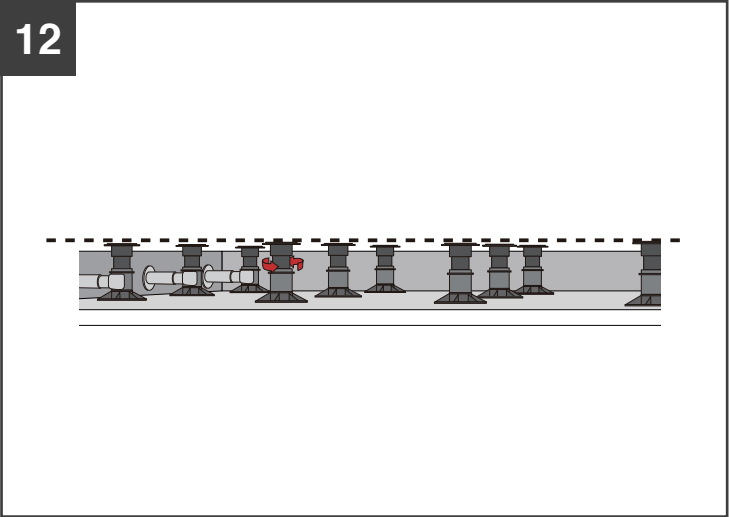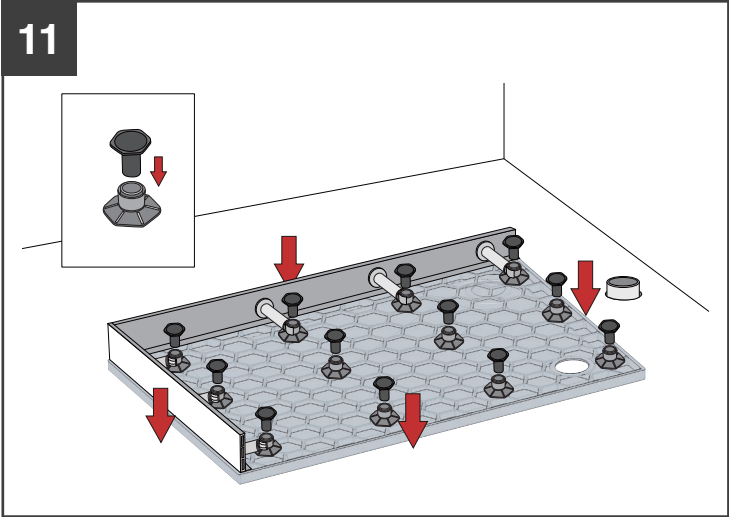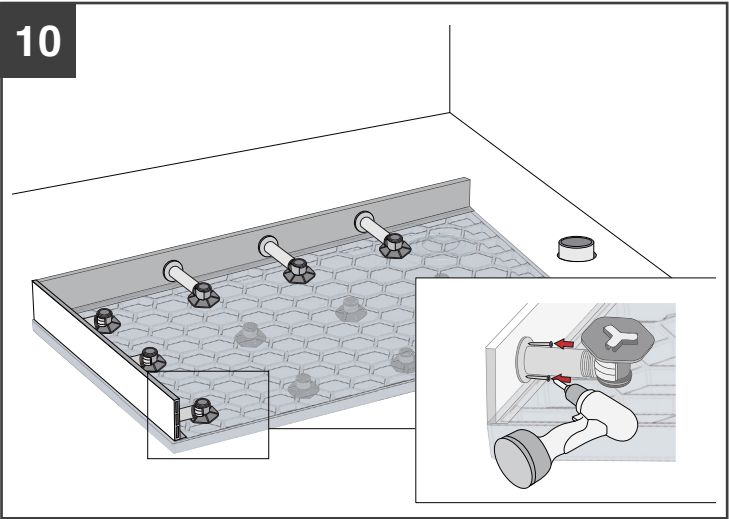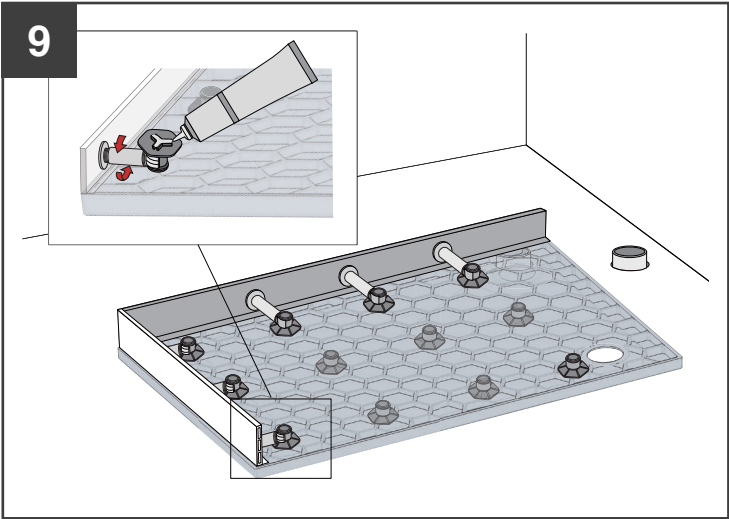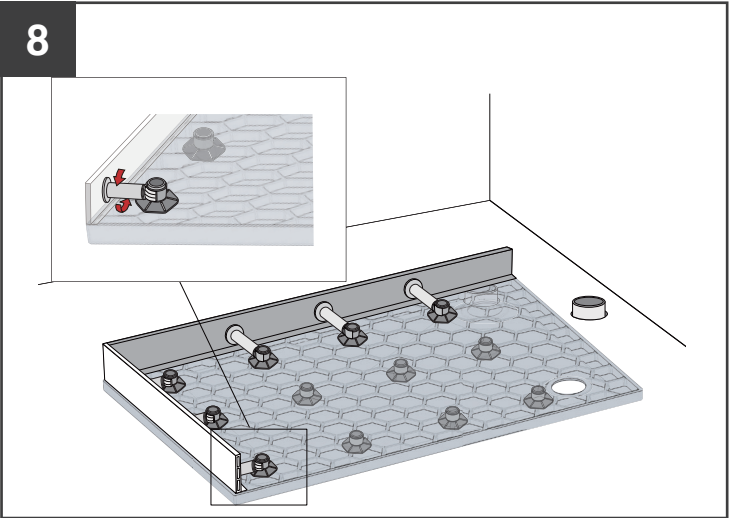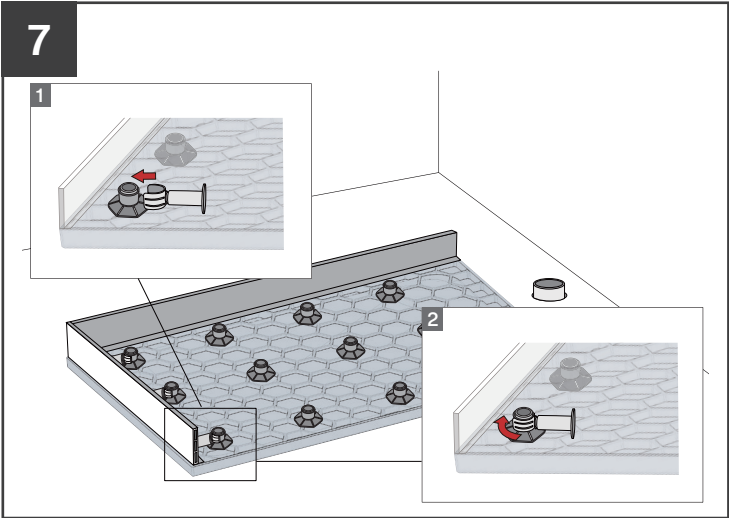


Exin Shower Tray with Leg & Panel Kit Installation Manual




THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER

INSTALLATION


13

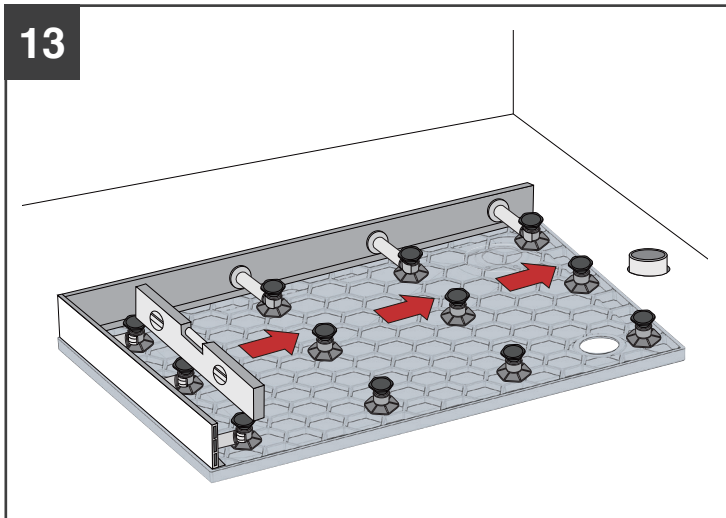


14

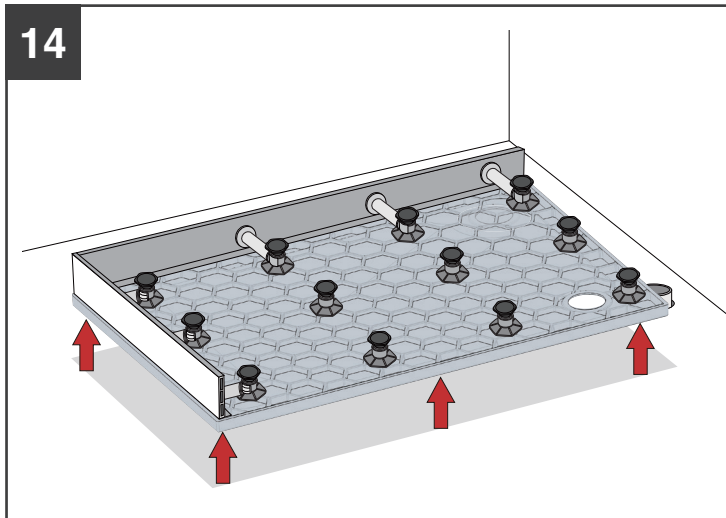


15

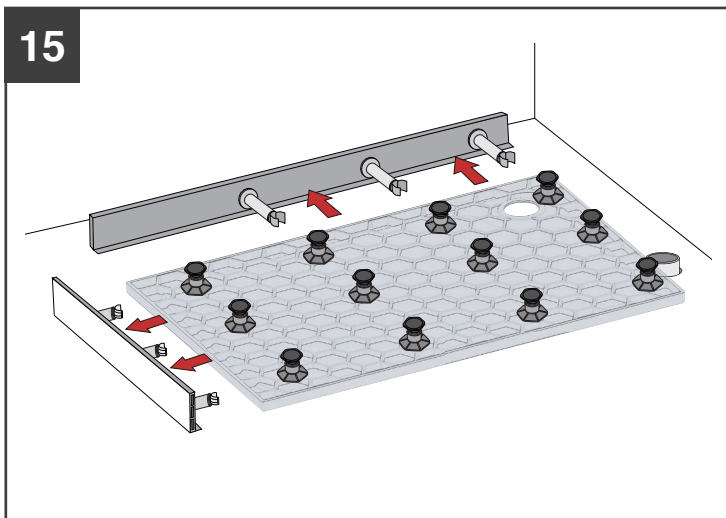


16

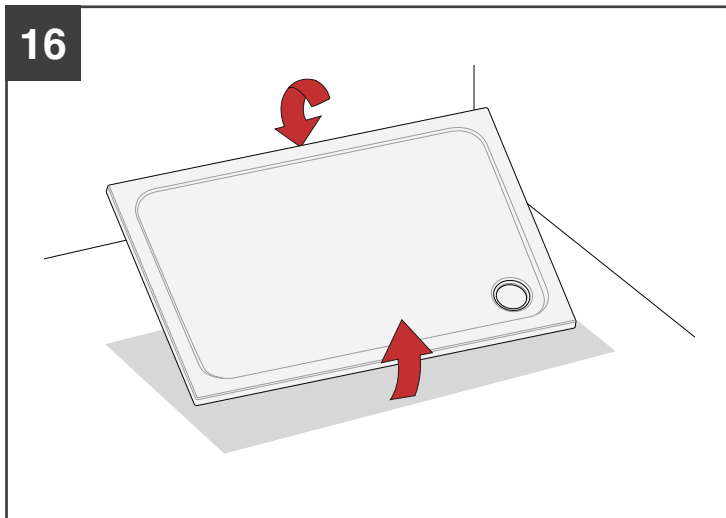

17

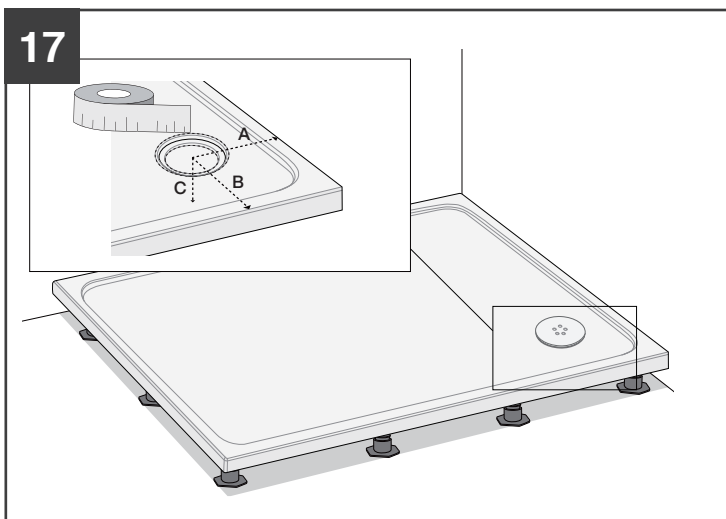

18






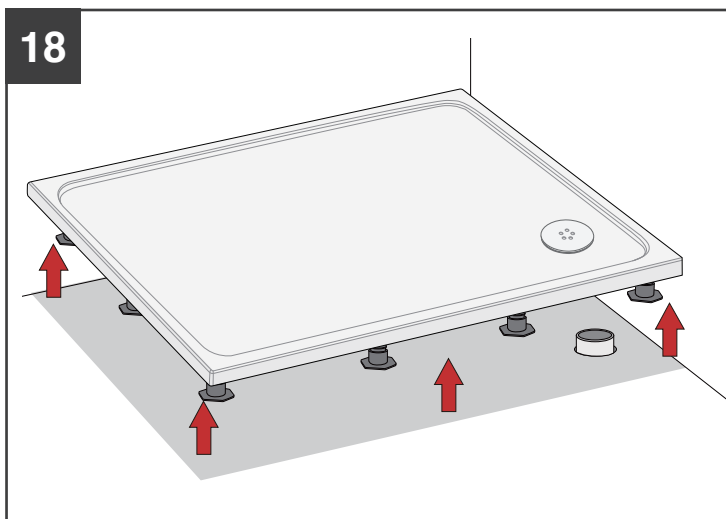


Exin Shower Tray with Leg & Panel Kit Installation Manual



THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER

INSTALLATION

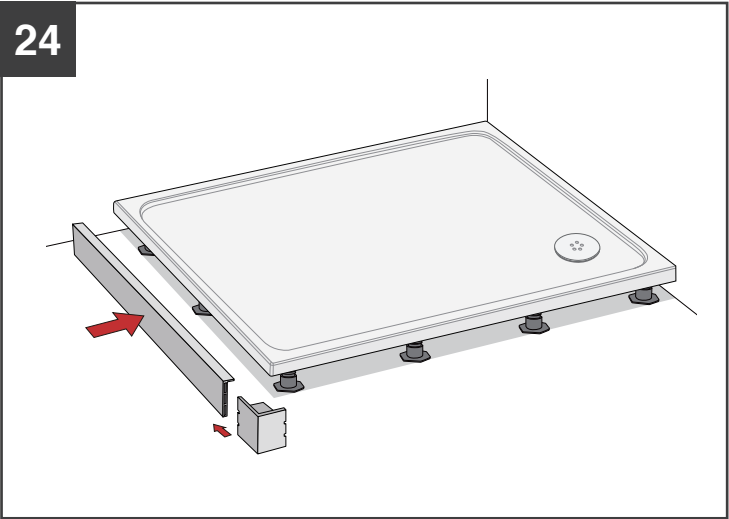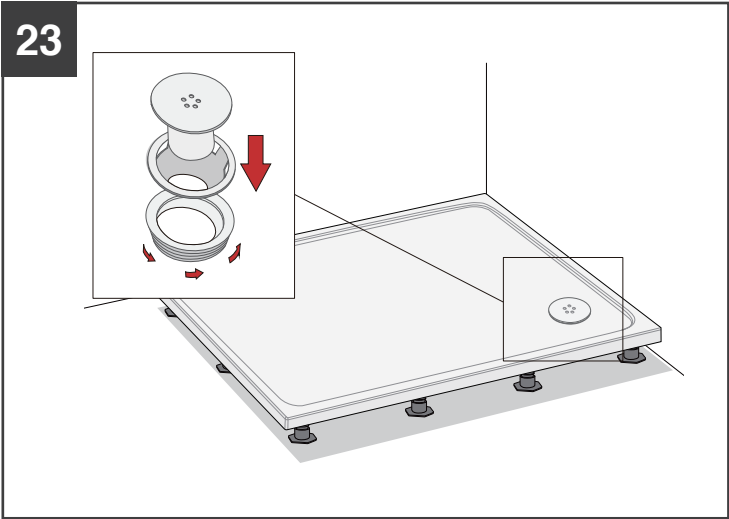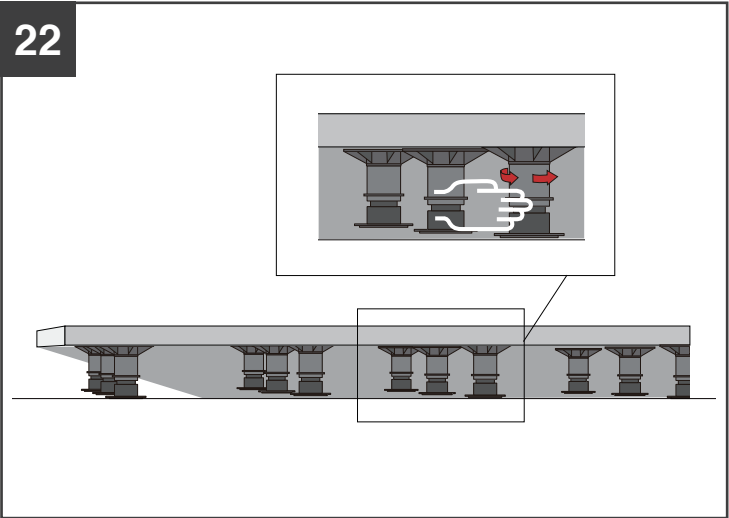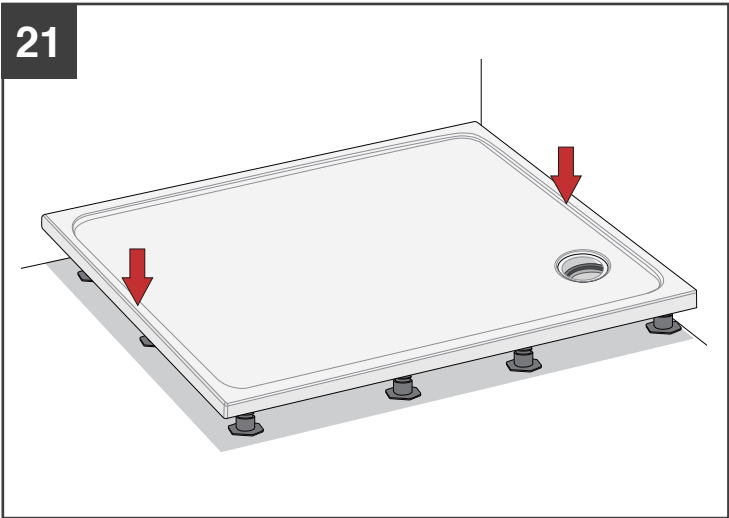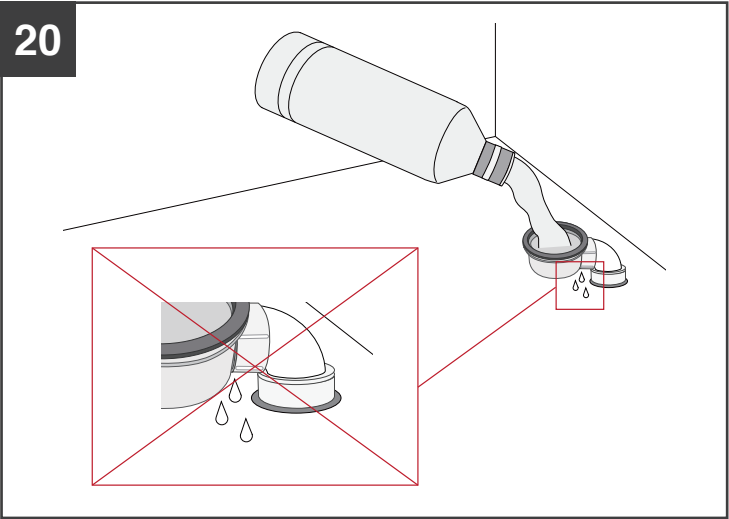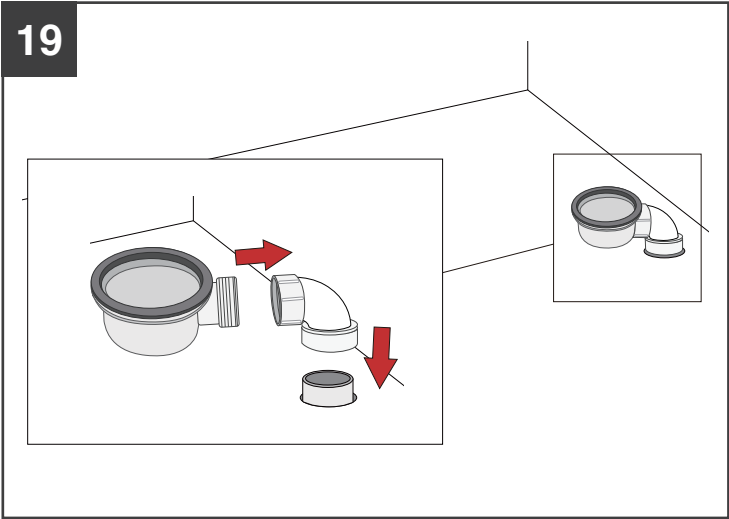


Exin Shower Tray with Leg & Panel Kit Installation Manual




THIS PRODUCT MUST BE INSTALLED
BY A QUALIFIED PLUMBER

INSTALLATION


25

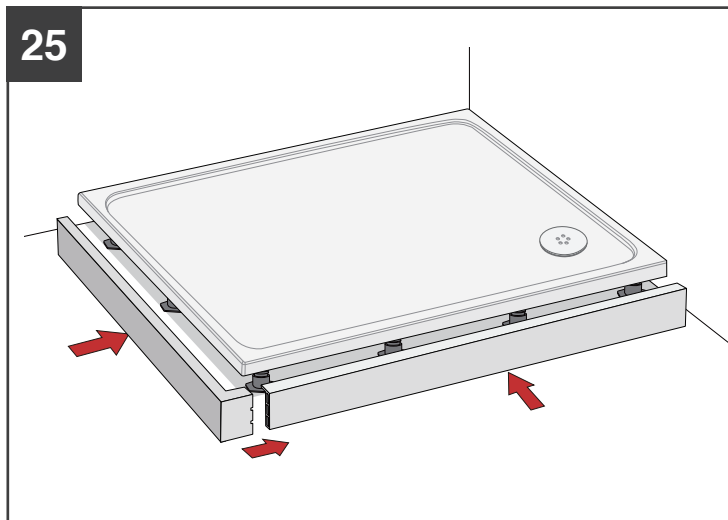


26

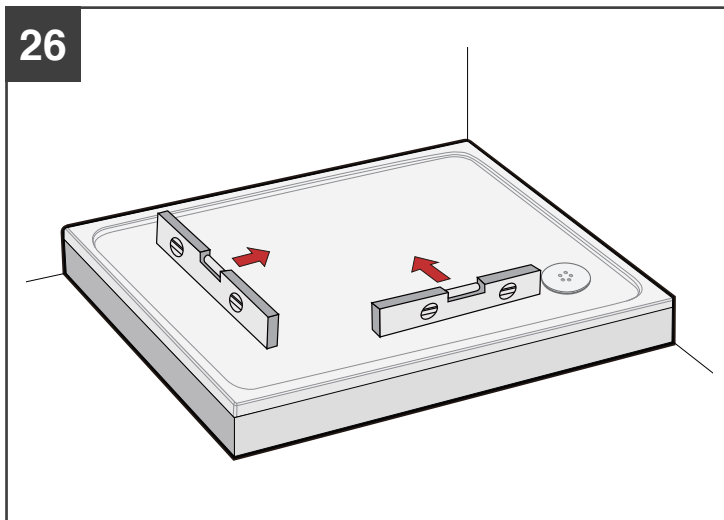

27

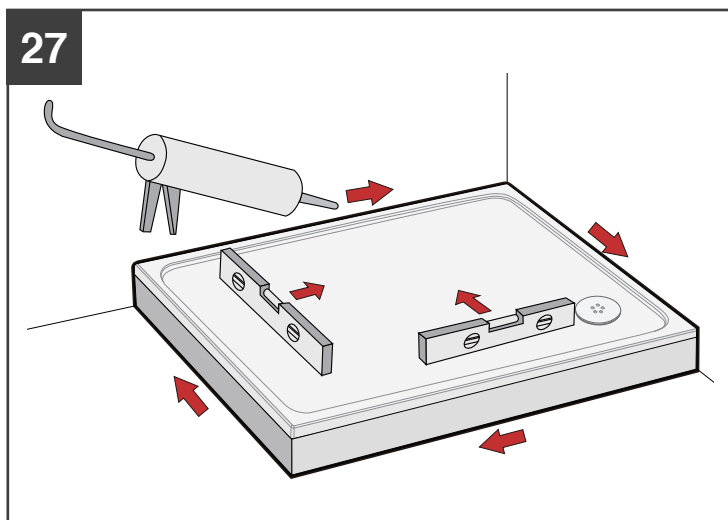

28

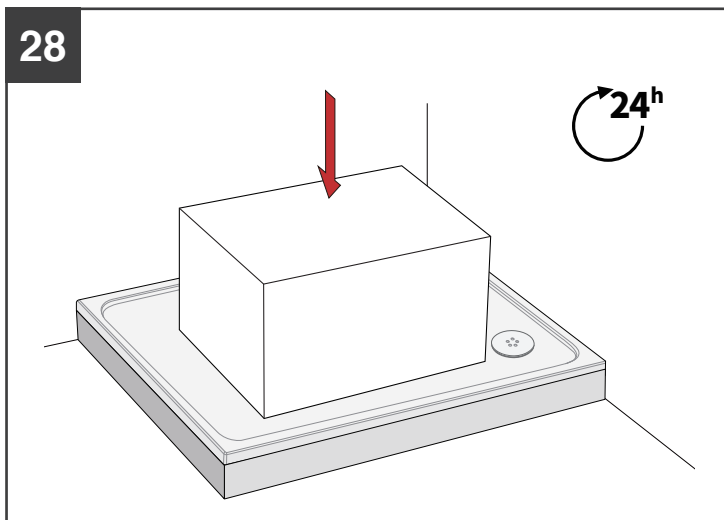

CARE INSTRUCTION

It is normal for small amounts of localized water to be retained on the shower tray surfaces after use which should be wiped dry immediately to prevent build up of sediments.

- Clean regularly with a PH Neutral Detergent, rinse well with water until there is no residue from detergent & dry.
- To remove any residue simply wipe with a clean cloth and PH Neutral Detergent, rinse well with water.
- Avoid the use of scouring sponges as well as alcohol, acid or abrasive cleaners.